

# INSTRUCTIONS FOR USE

## *Corello F01*

### GENERAL INSTRUCTIONS


Remove the fire from the packing, checking that neither the heater nor the power cable has been damaged during transport. Do not operate the heater if damaged. The accessories are found in a box that is packed at the side of the fire.

### INSTALLATION OF THE FIRE

**Where a chimney is not blocked off completely it will cause the heater to cut out during use.**

The inset dimensions for Hole in the Wall: **depth 12.5cm, height 55cm and width 54cm.** To prevent the fire from being pulled over it must be secured into place. The height at which you wish to fix the fire to the wall is up to you, though we recommend 60cm from the floor to the bottom of the fire.

Using as a Hole in the Wall: Firstly remove outer spacer (See B&C) frame to expose actual fire casing and the decorative fire front (See A).

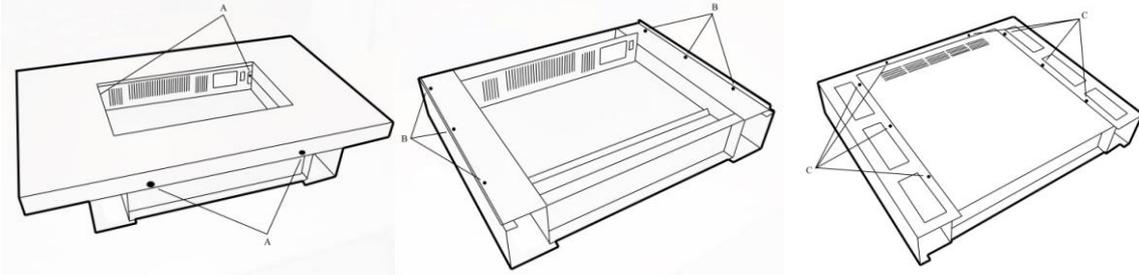

To remove the decorative front (A), there are two screws on the underside and two screws either side of the heater outlet next to the on/off switch and the keypad. To remove the spacer there are eight screws on the rear (C) and with the decorative front removed, six more also (B). Four keyhole slots should now be visible, two on each side of the outer return. Place the fire into the hole, mark off at the **TOP** of the keyhole slots where the fixing holes are to be drilled. Remove fire and drill the holes. When this is done push the rawl plugs into the drilled holes and half screw in the fixings. Finally lift and hook the fire back onto the fixings and tighten. The decorative front may be reapplied.

Using as a Hang on the Wall. The rail should be fixed to the wall with the **hook** facing upward and outward. Once the rail has been fixed in place, lift and hook the fire onto the rail. Next at the back of the case bottom/centre is a fold out tag. Fold this down as to expose it under the fire when it is hung in place. Mark off through the hole, remove fire, drill and fit rawl plug. Hang the fire back on the wall and secure in place using the screw provide.

**Important: The fire must be positioned so that the plug socket is accessible once the fire has been installed. In the unlikely event of breakdown access must be allowed for so that the fire may be serviced (DO NOT SEAL). This will involve the fire being removed from the wall in order to gain access the rear. The mains cable must therefore be long enough to allow this. If the removal of the plug is absolutely necessary for installation, cut off in an area within 100mm only of the plug itself. Any further will affect your warranty. Where an inset fire is being used in an existing chimney, it is important that the chimney is blocked off to prevent airflow problems with the fire.**

### Electrical connections

Your appliance comes fitted with a plug that incorporates a 13A fuse. The replacement fuses must be 13A and ASTA approved. If the fuse cover is lost the plug must not be used until a replacement cover, of the same colour, is obtained an electrical retailer.

The appliance is fitted with a moulded plug if it is necessary cut off the plug, for any reason, it must be discarded immediately with the fuse removed. Under no circumstances should any attempt be made to reuse the plug, do not insert into any 13A socket as this could cause a hazard.

### **WARNING THIS APPLIANCE MUST BE EARTHED**

#### **IMPORTANT**

The wires in the mains lead are coloured in accordance with the following code.

Green and yellow:	EARTH
Blue:	NEUTRAL
Red:	LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the colour markings in your plug proceed as follows: -

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E, or coloured green or coloured green and yellow, or marked with the earth symbol

The wire which is coloured blue must be connected to the terminal in the plug which is marked with the letter N, or coloured black.

The wire which is coloured brown must be connected to the terminal in the plug which is marked with the letter L, or coloured red.

If the mains cable is damaged it must be replaced by the manufacturer or an authorised technical service centre.

### Fuel effect Pebbles/coal

Once the fire has been installed in the correct position unpack the pebbles/coins from the accessory box and arrange on the fibre glass fuel bed.

### OPERATING THE FIRE

#### Controls

There is a **main on/off switch** under the fire opening, this is marked with **I/O** and will need to be switched to **I (standby)** to operate the fire. In the **O (off)** you will be unable to operate the fire. The fire can be operated either by manual or remote control.

1. To turn the fire on, simply press and release the **FIRE ON** or  button on the remote or manual keypad.

2. To set the flame effect to your desired brightness press + or - buttons marked **DIMMER1** or  1.

- For heating the fire must be switched on. To give 1000watts of heat, press then release the button marked **ON/OFF HEAT** or  **O/I**. To increase the temperature to 2000watts press then release button marked **HI/LO** or  **I/II**. You may alternate from 1000watts to 2000watts by pressing **HI/LO** or  **I/II** at anytime. To turn the heater off, press then release the button marked **ON/OFF HEAT**  **O/I**. The heater will always start in the lower setting
- To turn the fire off press then release the button marked **FIRE OFF** or  .

**Areas around the front of the fire will become hot when the heater is activated. We strongly recommend small children be kept away from having any direct contact with the appliance by means of fitting a fireguard. This appliance is not intended for use by persons (or children) with reduced physical sensory or mental capabilities or lack of experience or knowledge unless they have been given supervision or instruction concerning the use of the appliance by the person responsible for their safety. Children should be supervised to ensure they do not play with this appliance.**

#### **Automatic safety cut out**

The heater is fitted with an automatic cut out to prevent any damage due to overheating. The heater will automatically cut out if the airflow is obstructed. **Never** cover the air inlets or outlets. To reset the fire, switch the fire off, remove the cause of overheating and allowed to cool for a suitable period then switch the fire back on.

**Caution:** In order to avoid a hazard due to inadvertent resetting of the thermal cut out, the appliance must not be supplied through an external switching device, such as a timer, or connected to circuit regularly switched on and off by a utility.

#### **MAINTENANCE**

**Before any maintenance/cleaning is undertaken, always disconnect the fire from the mains power supply.**

#### **Replacing light bulbs (Replace with 220/240V 40W E14 SES bulbs)**

Replacements are available from fireplace stores, supermarkets, good hardware or large DIY stores. Allow a suitable time for the bulbs to cool then remove the pebbles/coal fuel effect. The fibre glass fuel bed may be easily lifted out of place. Remove and replace bulbs, fibre glass fuel bed and fuel effect. Please note that replacement bulbs are not covered by the guarantee of the product.

#### **Changing internal Fuse**

\*Your fire uses an internal fuse fitted beside the main on/off switch marked with **I/O** to protect the PCB control board in case of a power surge. To gain access to the fuse, unscrew the fuse holder. The fuse is 3.15AMP with replacements available from Flamerite Fires stockists and most electrical stores.

#### **Changing or matching remote frequency**

If you receive a replacement remote in case of loss/damage or your remote interferes with another appliance near by you are able to change to an alternative frequency/address by following a simple procedure.

- Make sure the fire is turned to standby (off, but not from the mains) and the LED on the **manual keypad** is lit.
  - On the **manual keypad** press and hold the heater on & heater Hi/Low buttons together for 5 seconds and the LED will flash.
  - Press the **FIRE ON** or  button on the **remote control**. The fire will turn on & off twice.
- The procedure is now complete and the fire is once again ready for use. **(If no illumination turn off main on/off switch and leave for one minute to reset software).**

#### **Changing battery in the remote**

Your remote uses a CR2032 Lithium Battery, replacements are available from **Flamerite Fires** stockists, most electrical or photographic stores. Ensure battery is disposed of safely. Do not dispose of in fire, do not swallow and keep away from children.

#### **Cleaning**

The fire can be cleaned with a soft cloth and a non-abrasive cleaner.

#### **WARNINGS**

- Do not use the fire in the vicinity of a bath shower or swimming pool.
- Never use the fire to dry laundry.
- Never install the fire directly underneath a fixed main socket.
- Never cover the appliance during the operation of the fire.
- The use of an extension lead is not recommended.
- Particular caution should be applied to ensure that children do not play with the marbles/coal.
- As with any electrical appliance whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of small children.

#### **PROBLEM SOLVING**

No power to the fire	Check the wall socket, plug and fuse.
No illumination	<b>Turn off main on/off switch and leave for one minute to reset software</b> or Check dimmers set too low. Check bulbs have not blown or internal fuse has not blown (see maintenance). Heater will still work if any of the above are the case.
Heater cuts out continually	The safety cut has operated see note on <u>operating the Fire</u> . Where the inset fire is being used in an existing chimney, it is important that the chimney is blocked off to prevent airflow problems with the fire. Where a chimney is not blocked off sufficiently it will cause the heater to cut out and the flame effect to stop or work poorly.
Heater blows cold air	Check fitting. Your chimney must be <b>completely</b> sealed with no air being drawn away from the fire as is natural with a chimney open fireplace.
Remote will not work.	Check battery. See maintenance, Changing or matching remote frequency.
Loud humming noise when illuminated	Due to moving parts, the electric fire will make a noise. This may vary slightly. For a comparison it may be necessary to visit your local dealer. <b>Important: your home is quieter than a busy store.</b>
Noise from the heater when in use	Same as above. As well as a slight humming noise the sound of rushing air will be apparent. Both are normal.

Your fire is guaranteed for one year from the date of purchase. In the unlikely event of a breakdown you have access to our customer services team simply call **01543 251122** during office hours, 9am – 5pm