

INSTALLATION AND USER INSTRUCTION GUIDE



Electric Stove

with Remote Control

Model No.: 2646

Read these instructions thoroughly before use and keep for future reference.



Important Safety Instructions

- When using this electrical appliance, basic precautions should be followed to reduce the risk of fire, electric shock and injury to persons including the following:
- This heater must be used on an AC supply only and the voltage marked on the heater must correspond to the supply voltage.
- Do not switch the appliance on until it is properly installed as described in this manual.
- The heater must not be located immediately below a socket outlet.
- Do not leave the appliance switched on when leaving your home or going to sleep.
- Do not leave unattended when plugged into the mains supply.
- This heater is not intended for use by children. Never leave unsupervised children where the heater is left switched ON (I) or unguarded.
- Only use the appliance for domestic purposes and in the way indicated in these instructions.
- From time to time check the cord for damage. Never use the appliance if the cord or any part of the appliance shows signs of damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
-  **WARNING: IN ORDER TO AVOID OVERHEATING, DO NOT COVER THE HEATER.**
- Do not use this heater in the immediate surroundings of a bath, shower, swimming pool or any wet area.
- Make sure the connection cord does not touch any hot surfaces
- Keep the appliance at least 100cm (1.0m) from walls and any other combustible materials.
- Do not use the appliance outdoors
- Do not use if you have wet hands.
- Never move appliance by pulling the cord.
- Before cleaning the appliance, make sure it is unplugged from the mains power and that it is completely cool.
- Do not clean the appliance with abrasive cleaners or chemical agents.
- Never use accessories that are not recommended or supplied by the manufacturer.
- Never route the mains cable beneath carpet.
- Never use aerosols or similar close to the heater.
- Never use the heater to dry clothes or any other similar items.
- In order to avoid a hazard due to inadvertently resetting of the thermal cut out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by utility.
- This heater must not be used with an extension lead.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continually supervised.
- Children aged from 3 years and less than 8 years shall only switch on / off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understood the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or preform user maintenance.
- **WARNING:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where vulnerable people are present.

Getting Started

- Remove the appliance from the box.
- Remove any packaging from the appliance.
- Place the packaging inside the box and either store or dispose of safely.

Contents of Carton

- 1 piece: Electric Heater
- 2 pieces: Fixing screws
- 1 piece: Remote control
- 1 piece: Instruction Manual
- 2 piece: AAA Batteries

Installation Requirements

Installing the appliance into a back-panel with a cut out

Take care to measure the distance from the bottom of the appliance to the middle of the keyhole slots on either side of the stove body (Fig 1), mark and drill back panel in the fixing location (Fig 2) and insert the two screws leaving approximately 2-3mm between the screw head and panel as below (Fig 3)

Fig 1


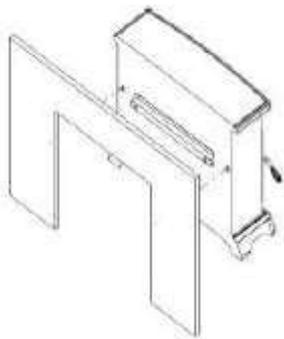


Fig 2



Fig 3

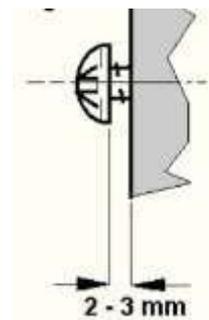

Installation Requirements


Installing appliance into a one piece back-panel no cut out (Flat Wall)

Take care to measure the distance from the bottom of the appliance to the middle of the keyhole slots on the fixing rail on the rear of the stove body (Fig 4), mark and drill the back panel in the fixing location (Fig 5). Insert the two screws leaving approximately 2-3mm between the screw head and panel (Fig 6).

Fig 4

Fig 5


Fig 6

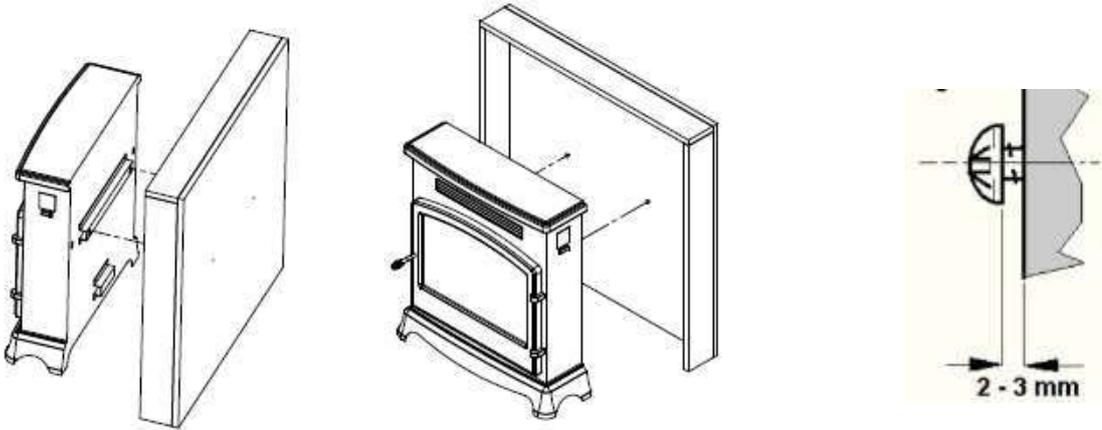

Should it be necessary to permanently fix the appliance into position, use the two brackets provided and fasten these to the underside of the top (Fig 7). Once these brackets have been fitted, offer the appliance to the wall and mark the fixing positions. Remove appliance and drill / plug wall with correct fixings for the medium. The stove can now be put back into position and screwed in place via the fixing brackets (Fig 8).

Fig 7

Fig 8

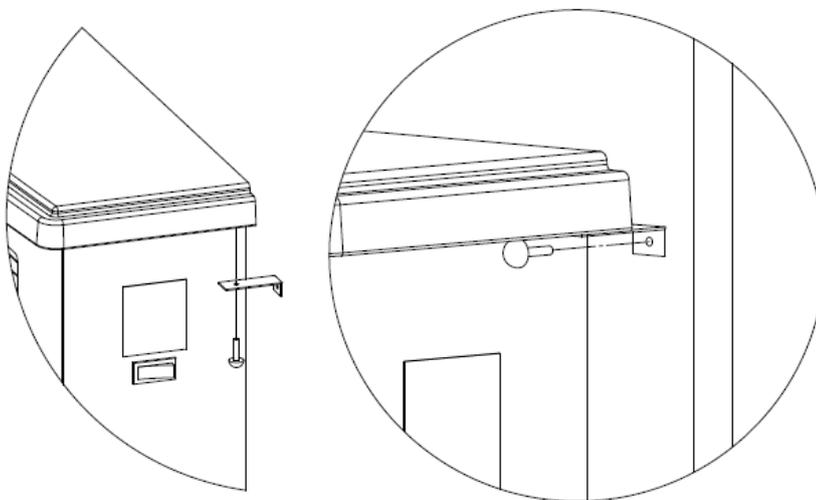

Operation Instructions


➤ The Controls

 

▪ Switching ON / OFF

- Use the ON / OFF switch to power on the heater (set it to standby mode).
- **In standby mode, the heater can be operated either manually by the switches located at the top and right side of heater or by the supplied remote control.**

▪ Manual Operation


- **NOTE:** The heater only starts working if the set temperature is higher than the ambient room temperature.

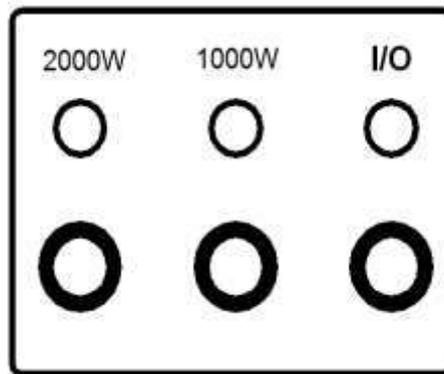

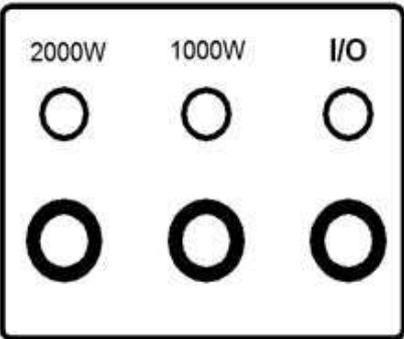
	○	Heater powered off
	—	Heater powered on, set to standby mode
	I/O	<ul style="list-style-type: none"> – Press to switch the flame effect ON/OFF – Press and hold to toggle between the 5 different flame levels
	1000W	Press to activate low level heating (1000W)
	2000W	Press to activate high level heating (2000W)

Remote Operation


- **NOTE:** The heater should be powered on using the ON/OFF switch before it can be operated using remote control.

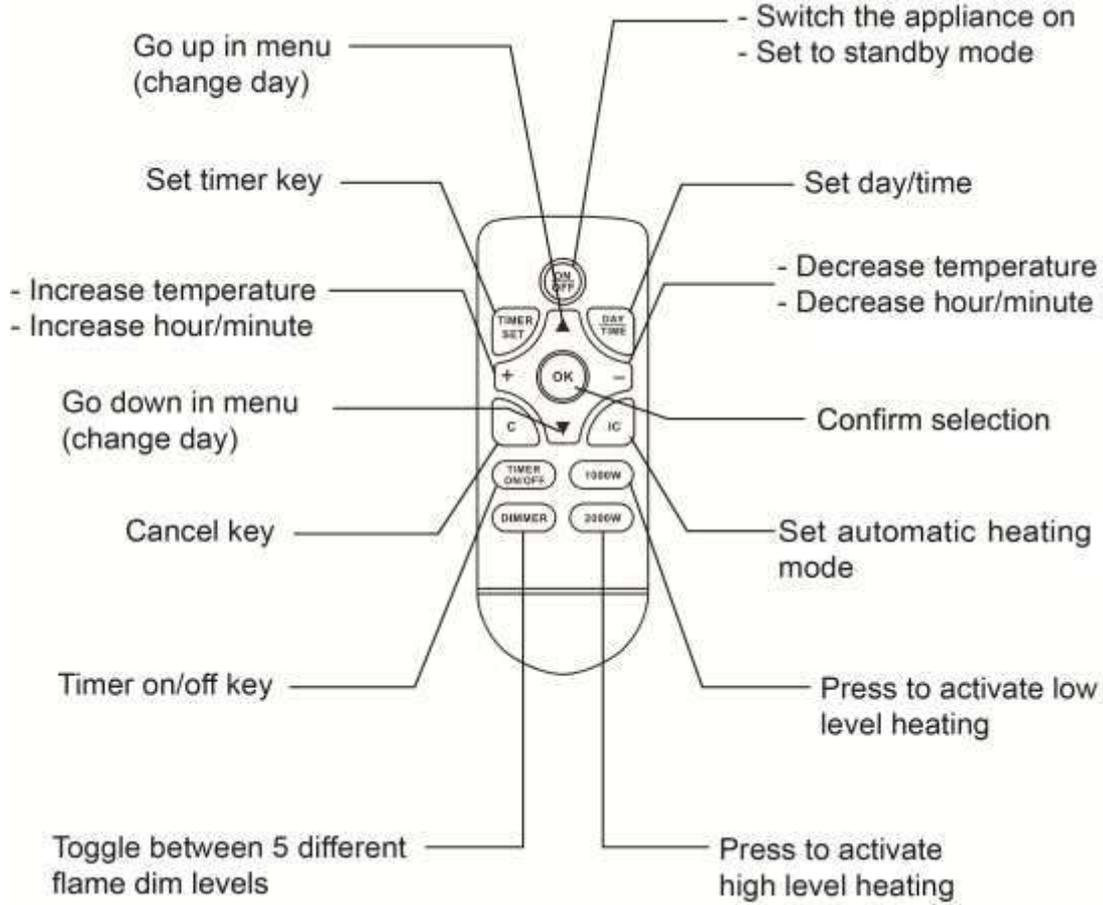

- **The remote control requires 2 x AAA size batteries (Supplied).**
- Open the battery compartment by sliding the cover down and insert the batteries noting the polarity indicated in the battery compartment.
- Keep batteries out of reach of children.
- Remote control operations are identical to the functions on the control panel.
- The remote control must be point directly at the sensor on control pad.

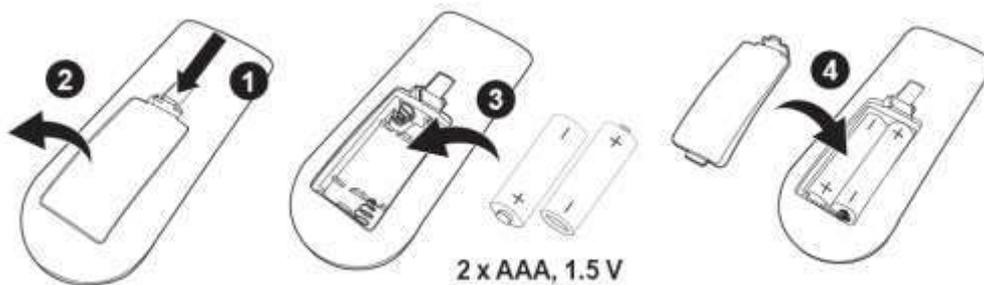

➤ Display (Shown on appliance screen)

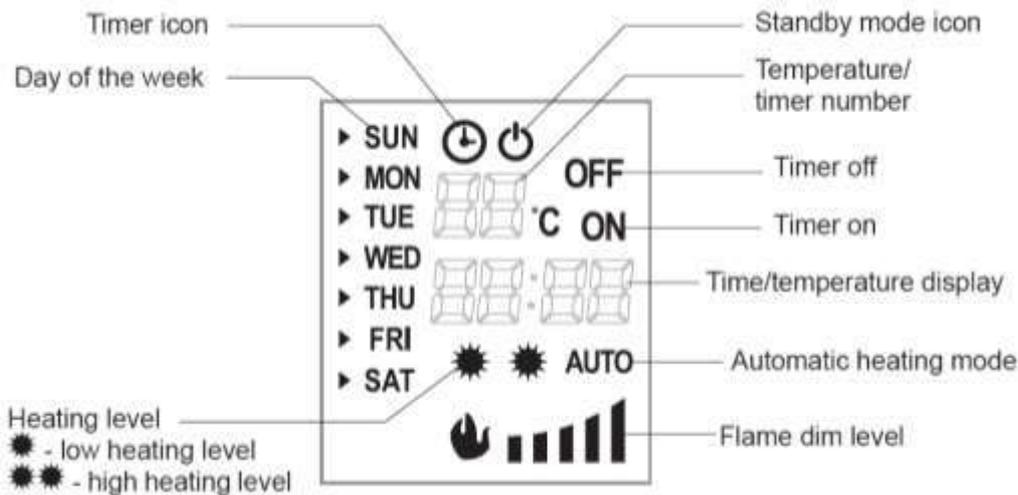

➤ Settings

▪ Setting weekday and time

- Press the **DAY / TIME** key. When the day is flashing press the ▲ or ▼ key to select the day.
- Press the **DAY / TIME** key again, then press the + or – key to set the hour.
- Press the **DAY / TIME** key again, then press the + or – key to set the minute.
- Press the OK key to confirm the setting.

▪ Setting temperature

- **NOTE:** This setting is only applicable for the temperature in standard heating mode, not for the temperature in the timer mode. **The default set temperature is 20°C.**
- **NOTE:** The heater only starts working when the set temperature is higher than the room temperature.
- Press the + or – key to set the temperature, which ranges from 15 to 30°C.
- After the temperature setting has been completed, the display flashes about 5 seconds, then shows the room temperature.

▪ Setting timer

- Up to 10 different timer settings can be programmed.
- Each timer setting has its day, power-on time and power-off time.
- The maximum duration of each timer setting is 23 hours 50 minutes.
- If the power-off time of the timer setting falls on the following day, it is unnecessary to set the day-just set the power-off time.
- Press the TIMER SET key, the timer number starts blinking (01-10).
- Press the + or – key to select a timer number.
- Press the TIMER SET key, the cursor on the left side of the day blinks.
- Press the ▲ or ▼ key to move the cursor to the corresponding day. Press the + key to add a corresponding day, or press the - key to delete a day.
- Press the TIMER SET key to set the on time. The hour digit starts blinking.
- Press the + or – key to set the hour.
- Press the TIMER SET key. The minute digit starts blinking.
- Press the + or – key to set the minute.

- Press the TIMER SET key to set the off time. The hour digit starts blinking.
- Press the + or – key to set the hour.
- Press the TIMER SET key. The minute digit starts blinking.
- Press the + or – key to set the minute.
- Press the TIMER SET key. The temperature digit starts blinking.
- Press the + or – key to set the temperature.
- Press the TIMER SET key to continue with the timer setting or press the OK key to confirm the setting.
- **Viewing the timer setting**
- Press the TIMER SET key.
- Press the + or – key to check the power-on time of the set timers one by one.
- To check the power-off time, press the ▲ key.
- Press the + or – key to check the power-off time of the set timers one by one.
- To delete selected setting, press the C key.
- **Activation timer**
- Press the TIMER ON / OFF key to activate the timer function.
- **NOTE:** When the timer is active, the heating level must be manually selected. If the heater function is not selected; only the flame effect goes on at the set power-on time.
- **Automatic heating mode**
- Press the IC key to activate automatic heating mode. The AUTO icon appears on the display.
- When the automatic heating is turned on, the heater automatically changes the heating level depending on the set temperature and the ambient room temperature.

Maintenance

- **WARNING:** Before any maintenance and / or cleaning the exterior of the heater, disconnect the heater from the power supply and leave the heater to cool off for a min of 15 minutes.
- The heater uses an electronically controlled LED system to create the flame effect therefore no parts need to be replaced. Under no circumstances should the heater be serviced by anyone other than a qualified electrician.

Safety Cut-out

- This heater is fitted with a safety cut-out which will operate if the heater overheats (e.g. Due to blocked air vents). For safety reasons, the heater will NOT automatically reset.
- To reset the heater, disconnect the heater from the mains supply for at least 15 minutes. Check vents for any blockages, reconnect the supply to the mains and switch on the heater.

Care and Cleaning

- Always disconnect the heater from mains supply and allow cooling before any cleaning operation.
- Trim parts may be cleaned using a clean, damp cloth. Never use abrasive cleaners and chemical agents as damage may occur to the finish.

Technical Specification

- **Supply:** 220-240V~ 50Hz
- **Rated power:** 2000W
- **Lighting:** LEDs

General Information

Model	2646				
Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P_{nom}	2.0	KW	manual heat charge control, with integrated thermostat	Not applicable
Minimum heat output (indicative)	P_{min}	1.0	KW	manual heat charge control with room and/or outdoor temperature feedback	Not applicable
Maximum continuous heat output	$P_{max,c}$	2.0	KW	electronic heat charge control with room and/or outdoor temperature feedback	Not applicable
Auxiliary electricity consumption				fan assisted heat output	Not applicable
At nominal heat output	$e_{l,max}$	0.014 (fan heater)	KW	Type of heat output/room temperature control (select one)	
At minimum heat output	$e_{l,min}$	0.014 (fan heater)	KW	single stage heat output and no room temperature control	[no]
In standby mode	$e_{l,SB}$	0.48	W	Two or more manual stages, no room temperature control	[no]
				with mechanic thermostat room temperature control	[no]
				With electronic room temperature control	[no]
				electronic room temperature control plus day timer	[no]
				electronic room temperature control plus week timer	[yes]
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	[no]
				room temperature control, with open window detection	[no]
				with distance control option	[no]
				with adaptive start control	[yes]
				with working time limitation	[no]
				with black bulb sensor	[no]
Contact details	BE MODERN LIMITED; 19/34 BEDESWAY,BEDE INDUSTRIAL EST, JARROW,TYNE AND WEAR NE32 3BE				


Electrical Connections - UK Plug Wiring Instruction

- If the plug has to be changed because it is not suitable for your socket, or due to damage, please follow the wiring instructions shown below.
- **The wires in the mains lead are coloured in accordance with the following code:**

BROWN	:	LIVE (L)
BLUE	:	NEUTRAL (N)
GREEN / YELLOW	:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please adhere to the following:

- The BLUE wire is the NEUTRAL and must be connected to the terminal which is marked with the letter N or coloured BLACK.
- The BROWN wire is the LIVE and must be connected to the terminal that is marked with the letter L or coloured RED.
- The wire which is coloured GREEN / YELLOW must be connected to the terminal which is marked E or the earth symbol \perp or coloured GREEN or GREEN / YELLOW.
- Always ensure that the cord grip is positioned and securely fastened.
- **WARNING: THIS APPLIANCE MUST BE EARTHED.**
- *If a 13A (BS1363) fused plug is used it must be fitted with a BS1362 13A fuse. If in doubt consult a qualified electrician.*

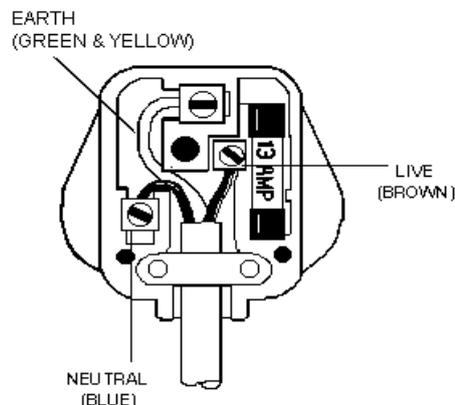

Electric Fire Guarantee

Be Modern Ltd. (the ‘Company’) provides a **Twelve month** guarantee in respect of electric fire (the ‘Product’) ranges.

- 1. The Twelve month Guarantee applies to:**
 - a. All products in the ranges manufactured by the ‘Company’ (but subject to the exceptions below): where
 - b. The product has been purchased and installed within the UK and in respect of
 - c. The initial installation: and in favour of
 - d. The original purchaser
- 2. Proof of Purchase must be retained by the Purchaser**
- 3. The Twelve month Guarantee does not apply to:**
 - a. **Damage or inferior workmanship practices whilst the ‘Product’ is being installed**
 - b. **Damage caused by mis-use of the ‘Product’ or where normal standards of care and use have not been complied with.**
 - c. **Damage through a malfunction or an inadequately installed electric fire.**
 - d. **Damage or defects due to mis-use, accident or unauthorised alterations.**
- 4. During the twelve months after the ‘Product’ has been supplied, the Guarantee covers the make good (whether by repair or replacement at the Company’s option) of defects arising from defective manufacture of materials of ‘Product’ covered in Para 1 all at no cost to the purchaser on the proviso:**
 - a. The Product has been installed as Be Modern recommendations
 - b. The Purchaser uninstalls the Product and makes it available for collection by Be Modern.

This Guarantee does not affect your statutory rights

On requiring service the purchaser should contact the retailer who supplied your product who will assist and advise you as necessary.



This fire complies with the European Safety Standards (LVD) EN60335-2-30 and the European Electro Magnetic Compatibility (EMC) En55015, EN60555-2 and EN60555-3 which covers the essential requirements of the EEC Directives and 89/336

Disposal Information



This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the produce was purchased. They can take this product for environmental safe recycling.

Be Modern Ltd. Customer Services: Tel (0191) 430 0901, Fax (0191) 430 9522