



Fire Your Imagination

Logic HE™ Range

Conventional Flue Log Effect



Instructions for Use, Installation and Servicing

For use in GB, IE (Great Britain and Republic of Ireland)

IMPORTANT

THE OUTER CASING, FRONT AND GLASS PANEL BECOME EXTREMELY HOT DURING OPERATION AND WILL RESULT IN SERIOUS INJURY AND BURNS IF TOUCHED. IT IS THEREFORE RECOMMENDED THAT A FIREGUARD COMPLYING WITH BS 8423 (LATEST EDITION) IS USED IN THE PRESENCE OF YOUNG CHILDREN, THE ELDERLY OR INFIRM.

This product contains a Heat resistant glass panel. This panel should be checked during Installation and at each servicing interval. If any damage is observed on the front face of the glass panel (scratches, scores, cracks or other surface defects), the glass panel must be replaced and the appliance must not be used until a replacement is installed. Under no circumstances should the appliance be used if any damage is observed, the glass panel is removed or broken.

It is essential that ALL of the screws that retain the glass frame are replaced and tightened correctly. Under no circumstances should the appliance be operated if any of these screws are loose or missing.

These Instructions must be left with the appliance for future reference and for consultation when servicing the appliance. Please make the customer aware of the correct operation of the appliance before leaving these instructions with them.

The commissioning sheet found on Page 3 of this Instruction manual must be completed by the Installer prior to leaving the premises.

Contents

Logic HE Conventional Flue

Covering the following models:

| GAS TYPE | LOGIC HE CF | |
|----------|----------------|---------------|
| | Remote Control | Slide Control |
| Nat Gas | 101-263 | 101-245 |
| LPG | 101-501 | 101-482 |

Appliance Commissioning Checklist3

User Instructions4

Installation Instructions10

Technical Specification 10

Site Requirements 13

Installation 15

Commissioning24

Servicing Instructions25

Fault Finding 25

How to replace parts 28

Spare parts list 35

Service Records 40

Information Requirement - Gas Heaters 41



If you have purchased your stove or fire from an authorised stockist within our Expert Retailer Network, then automatically your product will carry a 2 year warranty as standard. The 2 year warranty can be further extended to a total warranty period of 5 years by registering your Gazco Stove or Fireplace within one month of the latter of the purchase date or installation date. Accordingly, the start date for the warranty period is the date of purchase. During the registration process, the Expert Retailer details will be required for your Extended Warranty to be activated. Any product purchased outside of our Expert Retailer Network will carry a standard 12 month, non-extendable warranty.

It is a condition of the Extended Warranty that the installation complies with the relevant Building Regulations and is carried out by a suitably trained and qualified individual (GasSafe in the UK or equivalent in other countries) with the certificate of installation and the Commissioning Report on Page 3 completed and retained by the end user.

Full terms and conditions are detailed in the Warranty Statement on the Gazco website www.gazco.com. In the event of any conflict of information the wording on the website shall prevail.

Important Note: Should any problems be experienced with your product, claims must first be submitted to the Expert Retailer where the appliance was purchased from who will offer immediate assistance or contact Gazco on your behalf.



It is a requirement of the Building Regulations 2010 that the installation of this appliance is notified to the Local Authority. It is the responsibility of the GasSafe registered installer to carry out this notification to the Local Authority via the GasSafe register Competent Persons Scheme in England and Wales (different rules apply in Scotland and Northern Ireland).

When the installation has been notified, GasSafe will send a Building Regulations Compliance Certificate to you containing details of the work completed. Please ensure that the person responsible for the installation of this appliance completes this notification and records it in the Appliance Commissioning Checklist on page 3.

IT IS YOUR RESPONSIBILITY TO COMPLY WITH THE BUILDING REGULATIONS AND BE ABLE TO PRODUCE THIS CERTIFICATE SHOULD IT BE REQUIRED IN THE FUTURE.

Appliance Commissioning Checklist

To assist us in any guarantee claim please complete the following information:-

IMPORTANT NOTICE

Explain the operation of the appliance to the end user, hand the completed instructions to them for safe keeping, as the information will be required when making any guaranteed claims.

| FLUE CHECK | PASS | FAIL |
|--|-------------------|------|
| 1. Flue Is correct for appliance | | |
| 2. Flue flow Test | | |
| 3. Spillage Test | | |
| GAS CHECK | | |
| 1. Gas soundness & let by test | | |
| 2. Standing gas pressure | mb | |
| 3. Appliance working pressure (on High Setting) Minimum Pressure Requirement: NG - 17.5mbar LPG - 34.5mbar NB All other gas appliances must be operating on full | mb | |
| 4. Gas rate | m ³ /h | |
| 5. Does Ventilation meet appliance requirements | | |
| SAFETY CHECK | | |
| 1. Check soundness of the Thermocouple connections - including tightness and lead integrity | | |
| 2. Glass checked to ensure no damage, scratches, scores or cracks | | |
| 3. Glass frame secured correctly and all screws replaced | | |
| BUILDING CONTROL NOTIFICATION | YES | NO |
| 1. Installer notified GasSafe/Local Authority of installation via Competent Persons Scheme? | | |

RETAILER AND INSTALLER INFORMATION

| | |
|-------------------------------|-----------------------------------|
| Retailer | Installation Company |
| | |
| | |
| Contact No. | Engineer |
| | |
| Date of Purchase | Contact No. |
| | |
| Model No. | GasSafe Reg No. |
| | |
| Serial No. | Date of Installation |
| | |
| Gas Type | |

User Instructions

Welcome

Congratulations on purchasing your Logic HE fire, if installed correctly Gazco hope it will give you many years of warmth and pleasure for which it was designed.

The purpose of this manual is to familiarise you with your appliance, and give guidelines for its installation, operation and maintenance. If, after reading, you need further information, please do not hesitate to contact your Gazco retailer.

WARNING



In the event of a gas escape or if you can smell gas, please take the following steps:

- Immediately turn off the gas supply at the meter/emergency control valve
- Extinguish all sources of ignition
- Do not smoke
- Do not operate any electrical light or power switches (On or Off)
- Ventilate the building(s) by opening doors and windows
- Ensure access to the premises can be made

Please report the incident immediately to the National Gas Emergency Service Call Centre on 0800 111 999 (England, Scotland and Wales) , 0800 002 001 (N. Ireland) or in the case of LPG, the gas supplier whose details can be found on the bulk storage vessel or cylinder.

The gas supply must not be used until remedial action has been taken to correct the defect and the installation has been recommissioned by a competent person.

1. General

- 1.1 Installation and servicing must only be carried out by a competent person whose name appears on the GasSafe register. To ensure the engineer is registered with GasSafe they should possess an ID Card carrying the following logo:



- 1.2 In all correspondence, please quote the appliance type and serial number, which can be found on the data badge adjacent to the control assembly.
- 1.3 Do not place curtains above the appliance: You must have 300mm clearance between the appliance and any curtains at either side.
- 1.4 No furnishings or other objects should be placed within 1 metre of the front of the appliance.
- 1.5 If a shelf is fitted, a distance of 150mm above the decorative front is required.
- 1.6 If any cracks appear in the glass panel do not use the appliance until the panel has been replaced.
- 1.7 The decorative front will become hot during normal use and should be treated as a working surface. It is recommended that a suitable fireguard be used for the protection of young children and the infirm.
- 1.8 This product is guaranteed for 5 years from the date of installation, as set out in the terms and conditions of sale between Gazco and your local Gazco retailer. Please consult with your local Gazco retailer if you have any questions. In all correspondence always quote the Model Number and Serial Number.



IMPORTANT: NEVER position a television or screen above this appliance.

2. Operating the Appliance

- 2.1 There are 2 types of control systems available for this appliance:
- 2a. Remote Control
 - 2b. Slide Control
- Follow the relevant section for specific operation.

User Instructions


2a. Remote Control

The control valve is at the foot on the right-hand side of the appliance. It has two controls, see Diagram 1:

1. The right-hand knob controls the pilot ignition
2. The left-hand knob controls the main burner

Lighting the Pilot

- 2a.1 To start the left-hand and right-hand control knobs must both point to off (●):

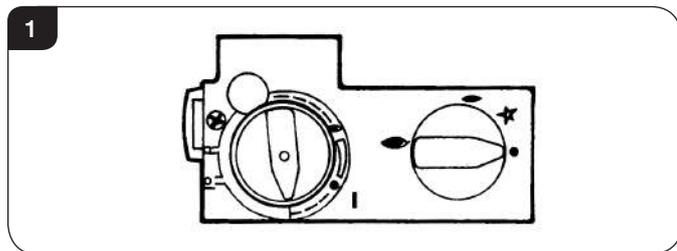

- 2a.2 Press in the right-hand control knob and rotate anti-clockwise until a click is heard. Continue to press in. The knob points to the pilot (←).

The pilot is lit.

- 2a.3 Keep the knob depressed for 10 seconds before releasing. The pilot remains lit.

Repeat the above steps if the pilot does not stay lit.


NOTE: If the pilot goes out, the Interlock system prevents you lighting again for a short period.

- 2a.4 If, after repeating the above steps the pilot does not light, contact your Retailer or Installer.

- 2a.5 Turn the right-hand control to point to main burner (↗). The appliance can now be controlled by the remote handset.

- 2a.6 The Standard remote controls the appliance when:
- the pilot is lit.
 - the right-hand control points to main burner (↗) ready to operate position.

It regulates the temperature from low to high and back. It can also turn the main burner off leaving just the pilot burning and ready to operate.

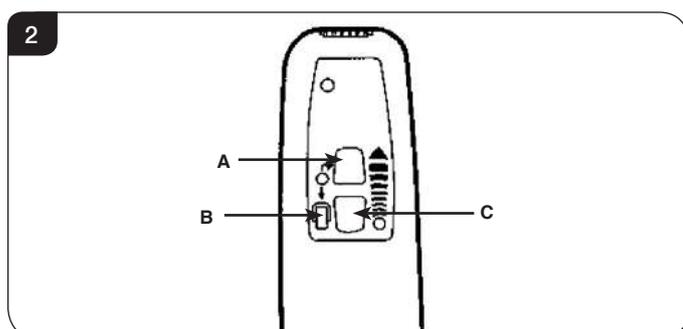

To light the main burner:

- 2a.7 Press buttons A & B simultaneously. The remote's LED light flashes to show communication between the appliance's controls and the remote.

Adjusting the Flame height:

- 2a.8 Press and hold buttons A & B simultaneously to increase the flame height. A clicking sound indicates that the appliance is at maximum.
- 2a.9 Press and hold button C to decrease the flame height. Continue to press C to turn off the main burner.

To make small adjustments to flame height:

- 2a.10 Press and hold down button B and press button A once to make a slight increase. This increases the temperature by stages.
- Repeat to further adjust.
- 2a.11 Press button C once to slightly reduce the flame height.



IMPORTANT: YELLOW FLAMES TYPICALLY APPEAR WHEN THE APPLIANCE HAS REACHED NORMAL OPERATING TEMPERATURE. THIS CAN TAKE UP TO 30 MINUTES.



WARNING: IF THE APPLIANCE FAILS TO LIGHT OR BECOMES EXTINGUISHED IN USE, WAIT 3 MINUTES BEFORE ATTEMPTING TO RELIGHT.

Switching OFF the Appliance

THE REMOTE CONTROL CAN TURN THE MAIN BURNER OFF AND LEAVE THE PILOT BURNING AND READY TO RUN (↗).

- 2a.12 To switch off the appliance completely (no pilot burning) return both control knobs to the off position (●).

Remote Control

- 2a.13 To turn the main burner of the appliance off using the handset press and keep pressing the Off button (●).

The main burner goes out leaving the pilot burning and ready to operate (↗).

Controls on Appliance

- 2a.14 Use the controls on the appliance to turn the appliance off by turning the left-hand control knob until it points to Off (●). A click is heard and the main burner goes out leaving the pilot burning and ready to operate (↗).

CAUTION: IN RARE INSTANCES, NOISES FROM SOURCES OUTSIDE THE REMOTE CAN OPERATE THE MAIN BURNER. IF THIS OCCURS, ALWAYS TURN THE CONTROL TO PILOT (↗) OR OFF.

User Instructions

Upgrading the Appliance

- 2a.15 The appliance is fitted with a control valve that can easily be upgraded. This can be obtained through your local Gazco retailer. There is no requirement for this upgrade to be carried out by an approved GasSafe engineer. However Gazco recommend that this task is undertaken by a suitably competent person.
- 2a.16 This upgrade can be fitted before or after installation but if side clearances are limited then it will be easier to upgrade the appliance before installation. Full instructions are included with the kit.

Thermostatic and Timer Remote Control (PART NUMBER 8456)

- 2a.17 This remote control can control the gas appliance after the pilot has been lit.

MANUAL MODE

Can be used to turn the main burner on and manually regulate it from low through to high and back again. It can also be used to turn the main burner off leaving the pilot burning.

AUTO MODE

Will automatically regulate the room to a pre-set temperature.


TIMER MODE

Will turn the appliance on and off according to a pre-set programme and automatically regulate the room temperature during the two on periods.

2b. Slide Control

This appliance is operated using the slide control on the top right hand side of the decorative front.

When the appliance is OFF the slide control will be at the highest point, see Diagram 3.

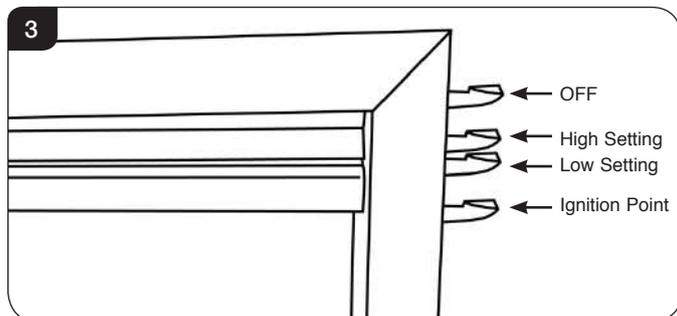

Lighting the Pilot

- 2b.1 Push the slide control down as far as possible to its lowest point, see Diagram 3, this is the ignition point.

Keep the slide control pressed down for 5 seconds to ensure the pilot is lit. Then release.

The appliance should light on its lowest setting.

- 2b.2 When released the slide control automatically raises to a natural stop point, see Diagram 3.

Repeat the above steps if the appliance does not light.

- 2b.3 If, after repeating the above steps the pilot does not light, contact your Retailer or Installer.

Adjusting the Flame height

- 2b.4 Increase the flame height and temperature by carefully moving the slide control up until the next stop point is felt, see Diagram 3. This denotes the highest setting.
- 2b.5 Carefully move the slide control down to the lower stop point to return to the lowest setting.



IMPORTANT: YELLOW FLAMES TYPICALLY APPEAR WHEN THE APPLIANCE HAS REACHED NORMAL OPERATING TEMPERATURE. THIS CAN TAKE UP TO 30 MINUTES.



WARNING: IF THE APPLIANCE FAILS TO LIGHT OR BECOMES EXTINGUISHED IN USE, WAIT 3 MINUTES BEFORE ATTEMPTING TO RELIGHT.


Switching OFF the Appliance

- 2b.6 To turn the appliance off lift the slide control to its highest stop point, see Diagram 3. The pilot goes out.

3. Changing the Battery

Remote Control

- 3.1 The battery box is located at the bottom left of the appliance behind the ash cover.
- 3.2 Remove the old batteries and replace with a new high quality (Duracell or similar) 4 AA batteries.

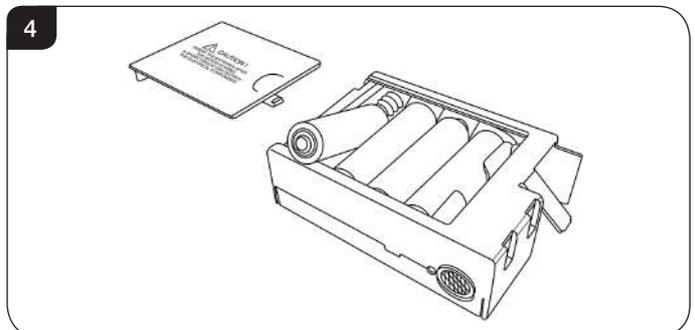


It is essential to use high quality batteries (Duracell or equivalent) when replacing batteries.

User Instructions

Slide Control

- 3.3 The battery box is located at the bottom left of the appliance behind the ash cover, see Diagram 5.

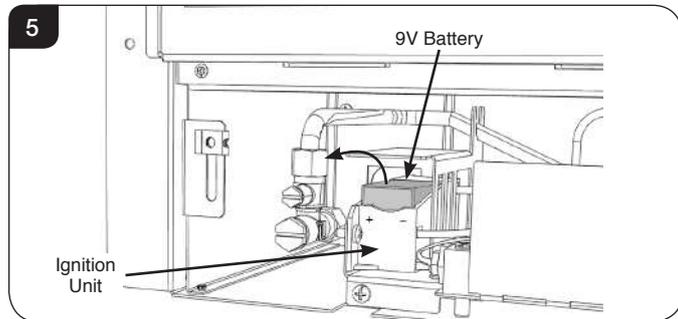


- 3.4 Remove the old battery and replace with a new high quality (Duracell or similar) 9V battery.

i It is essential to use high quality batteries (Duracell or equivalent) when replacing batteries.

4. Cleaning the Appliance

- 4.1 Make sure the appliance and surrounds are cool before trying to clean.
- 4.2 Refer to the separate decorative front instructions to remove the front from the appliance.
- 4.3 Remove the glass frame by removing the 4 screws in the retaining bracket, see Diagram 6.

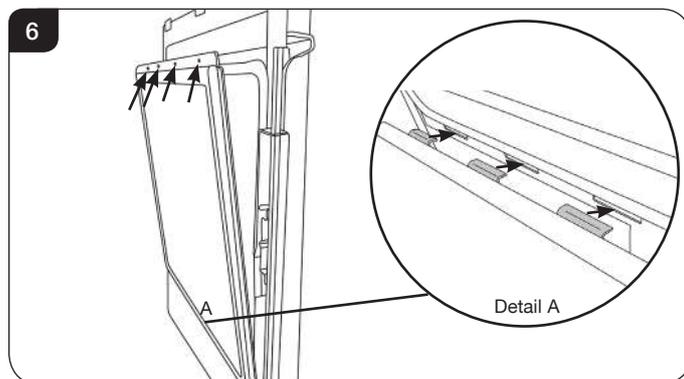

- 4.4 Tilt the top of the glass frame forward and disengage the lower location tabs from the slots in the firebox, see Diagram 5, Detail A. Place carefully to one side.
- 4.5 To clean the glass surface, Gazco recommends you use hot soapy water.
- 4.6 The glass frame must be refitted to the appliance following cleaning or servicing. Ensure that the rope seal on the box is intact, then locate the glass frame location tabs into the slots on the firebox, see Diagram 5, Detail A.
- 4.7 Secure the glass frame using 4 screws in the retaining bracket, see Diagram 5. Replace ALL of the securing screws ensuring that a screw is present in all fixing slots.

NEVER OPERATE THE APPLIANCE WHEN THE GLASS FRAME IS REMOVED OR BROKEN.

Refer to the separate decorative front instructions to replace the front on the appliance.

! UNDER NO CIRCUMSTANCES SHOULD THE APPLIANCE BE USED IF ANY OF THE GLASS FRAME RETAINING SCREWS ARE LOOSE OR MISSING.

5. Arrangement of the Fuel Bed

Advice on handling and disposal of fire ceramics

! The fuel effect and side panels of this appliance are made from Refractory Ceramic Fibre (RCF), a material which is commonly used for this application.

Protective clothing is not required when handling these articles, but we recommend you follow normal hygiene rules of not smoking, eating or drinking in the work area and always wash your hands before eating or drinking.

To ensure that the release of RCF fibres are kept to a minimum, during installation and servicing a HEPA filtered vacuum is recommended to remove any dust accumulated in and around the appliance before and after working on it. When servicing the appliance it is recommended that the replaced items are not broken up, but are sealed within heavy duty polythene bags and labelled as RCF waste.

RCF waste is classed as stable, non-reactive hazardous waste and may be disposed of at a licensed landfill site.


Excessive exposure to these materials may cause temporary irritation to eyes, skin and respiratory tract; wash hands thoroughly after handling the material.

User Instructions


6. Log Layout

LOGS MUST BE POSITIONED ACCORDING TO THE FOLLOWING INSTRUCTIONS TO GIVE THE CORRECT FLAME EFFECT.


6.1 Ensure the burner tray is clean and free from any debris, see Diagram 7.

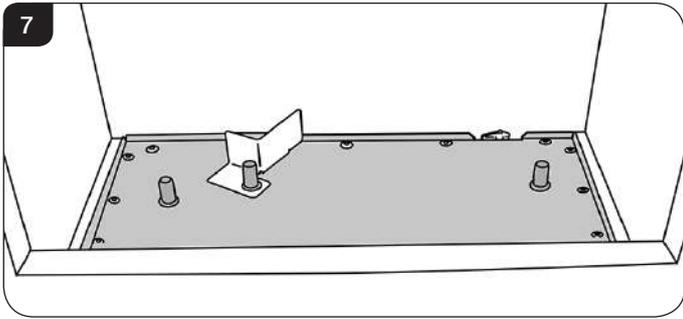


6.2 Place Log A in position on the 2 locating pins, see Diagram 8.

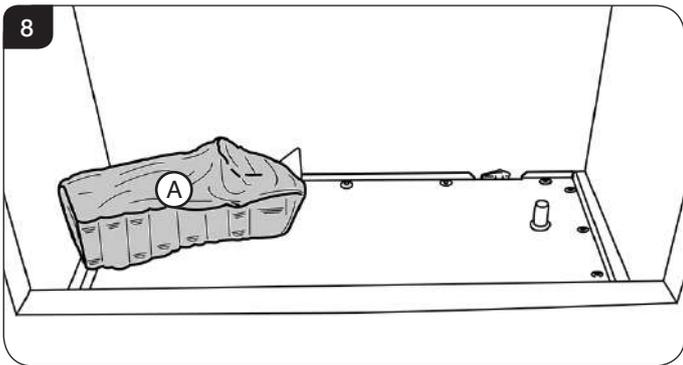


6.3 Spread the Lava Rock evenly over the fuel bed and around Log A, see Diagram 9.

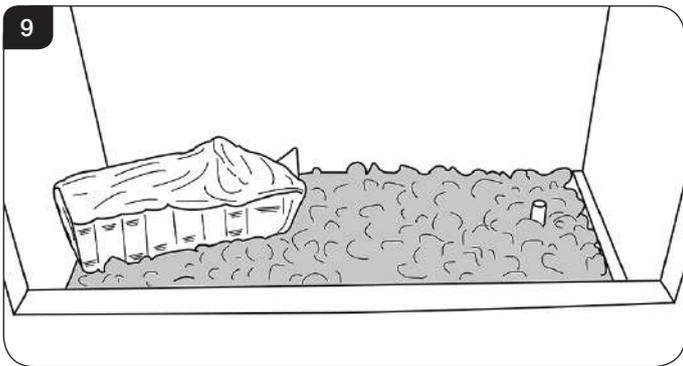


6.4 Log B is positioned on the right hand locating pin, and rests against the back liner, see Diagram 10.

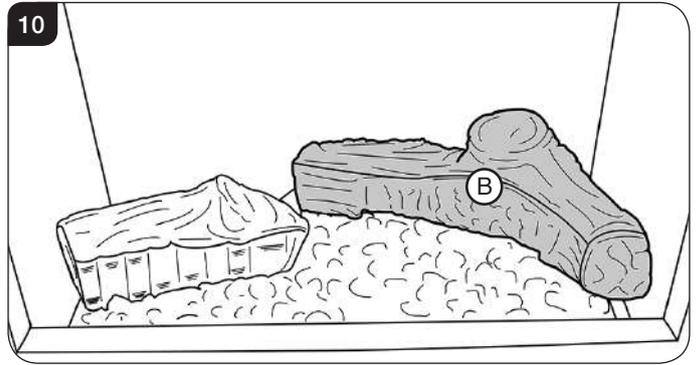


6.5 Log C rests on Log A and the front tray with the locating pin facing up, see Diagram 11.

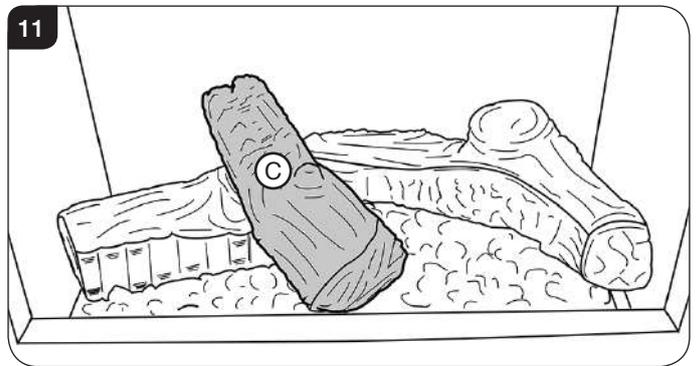

6.6 Log D fits onto the locating pin and rests on Log B, see Diagram 12.

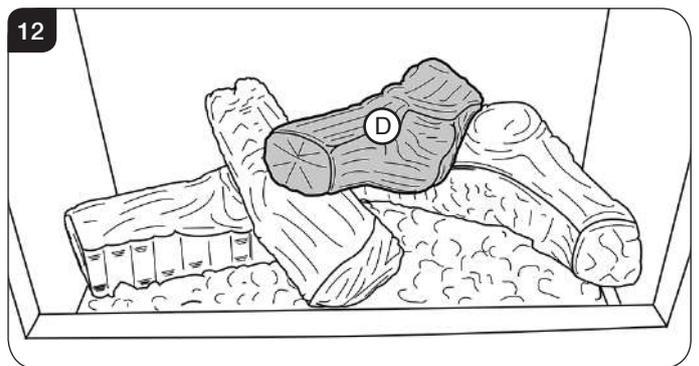


6.7 Position the 2 embers in the front right and back left corners, see Diagram 13.

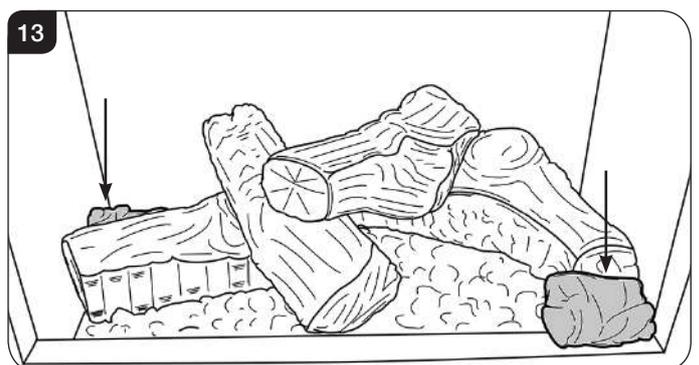

User Instructions

- 6.8 Sparingly spread an amount of the Embaglow fibres provided on the sections highlighted, see Diagram 14. Take care not to use more than half a packet per application.
WARNING - DO NOT PLACE NEAR THE PILOT AREA.

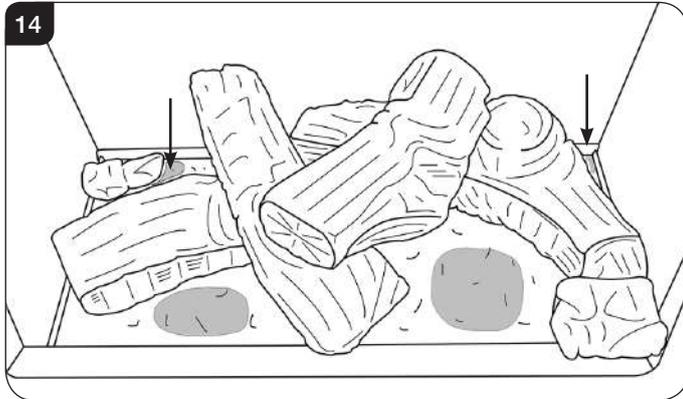

7. Oxygen Depletion Sensor

The appliance is fitted with an oxygen sensitive pilot system that will act to cut off the gas supply to the appliance should the oxygen in the room fall below its normal level. If the appliance is turned off by this device, it usually indicates that there is a problem with the flue system, and this should be inspected by a qualified engineer. **Do not attempt to use the appliance until an engineer says it is safe to do so.**

This device is not a substitute for an independently mounted carbon monoxide detector.

8. Flame Failure Device

- 8.1 This is a safety feature incorporated on this appliance which automatically switches off the gas supply if the pilot goes out and fails to heat the thermocouple.

IF THIS OCCURS DO NOT ATTEMPT TO RELIGHT THE APPLIANCE FOR 3 MINUTES.

9. Running In

- 9.1 During initial use of a new GAZCO appliance a strong odour will be encountered as various surface coatings become hot for the first time. Although these odours are harmless it is recommended that the appliance is operated on maximum for 4 to 8 hours in order to fully burn off these coatings. After this period the odours should then disappear.
- If the odours persists, please contact your installer for advice.
- 9.2 During the first few hours of burning there may be discolouration of the flames. This will also disappear after a short period of use.

10. Servicing

- 10.1 The appliance must be serviced every 12 months by a qualified GasSafe Engineer. In all correspondence always quote the Model number and the Serial number which may be found on the Commissioning Checklist (Page 3).

11. Ventilation

- 11.1 Any purpose provided ventilation should be checked periodically to ensure that it is free from obstruction.

12. Installation Details

- 12.1 Your installer should have completed the commissioning sheet at the front of this book. This records the essential installation details of the appliance. In all correspondence always quote the Model number and Serial number.

13. Hot Surfaces

- 13.1 Parts of this appliance become hot during normal use.
- 13.2 Regard all parts of the appliance as a working surface, except for the control access panel and the slider handle (slide control model only).
- 13.3 Provide a suitable fireguard to protect young children and the infirm.

Installation Instructions

Technical Specification

Covering the following models:

| GAS TYPE | LOGIC HE CF | |
|----------|----------------|---------------|
| | Remote Control | Slide Control |
| Nat Gas | 101-263 | 101-245 |
| LPG | 101-501 | 101-482 |

| Model | | Gas CAT. | Gas Type | Working Pressure | Aeration | Injector | Gas Rate m ³ /h | Input kW (Gross) | | Country |
|---|--------|-----------------|-----------------|------------------|-----------|----------|----------------------------|------------------|-----|---------|
| | | | | | | | | High | Low | |
| Logic HE CF Log | Remote | I _{2H} | Natural Gas G20 | 20mbar | 2 x 6.5mm | 170 | 0.495 | 5.2 | 2.5 | GB, IE |
| | Slide | | | | | | | | | |
| Logic HE CF Log | Remote | I _{3P} | Propane G31 | 37mbar | - | 150 | 0.192 | 5.1 | 2.5 | |
| | Slide | | | | | | | | | |
| Efficiency 84% Net (Class 1) | | | | | | | | | | |
| NO_x Class 5 | | | | | | | | | | |
| Min Flue Size - 5" Diameter | | | | | | | | | | |
| Minimum Flue Specification = T250/N2/0/D/1 | | | | | | | | | | |
| Gas Inlet - 8mm | | | | | | | | | | |

i The net efficiency of this appliance has been measured as specified in BS7977-1:2009 and the result after conversion to gross using the appropriate factor from Table E4 of SAP 2012 is 75.8%. The gross efficiency value may be used in the UK Government's Standard Assessment Procedure (SAP) for energy rating of dwellings.

PACKING CHECKLIST

| Qty Description | Fixing Kit containing: |
|--|--|
| Log Version 1 x Log Set 1 x Lava Rock | 1 x Instruction Manual 1 x Embaglow 4 x Wood Screw 1 x Cable Retention Kit 1 x 1.7m Silicone Seal 4 x Steel Expansion Plug 4 x Eye Bolts 1 x 9v Battery 4 x AA Batteries (Remote Control only) |

Installation Instructions

Technical Specification

Complete Front Options

| FRONT | Remote | Slide Control |
|------------|---------------------------|---------------------------|
| DESIGNIO | 912-396, 912-018 | - |
| DESIGNIO 2 | 901-493, 901-511, 901-526 | 901-539, 901-580, 901-643 |
| VOGUE | 901-398 | |
| BEAT | 901-350 | |
| PROGRESS | 912-239 | - |
| TEMPO | 912-197, 912-221, 912-316 | 901-385, 901-403, 901-414 |
| WINCHESTER | 8697MB + 8697HP | 901-369, 901-372 |
| DIMENSION2 | 912-322 | - |
| RICHMOND | 8679 | - |
| STOCKTON | 901-488 | |

Frame & Front Combinations


| FRAMES | | | | |
|-----------------------|---------------------|---------|---------------|---------|
| | Box Profil2 Frame * | | Arts2 Frame * | |
| FINISH | Remote | Slide | Remote | Slide |
| Matt Black | 912-232 | 901-272 | 912-862 | 901-167 |
| Polished Brass Effect | 912-140 | 901-286 | - | - |
| Polished Steel Effect | 912-027 | 901-299 | - | - |
| Brushed Steel Effect | 912-358 | 901-310 | - | - |
| Polished Brass | - | - | 912-508 | 901-194 |
| Polished Stainless | - | - | 912-914 | 901-206 |
| Brushed Stainless | - | - | 912-268 | 901-214 |

| FRONTS | | | | | |
|-----------------------|------------|------------|-----------------|----------------|---------------|
| | Arts Front | Wave Front | Chartwell Front | Holyrood Front | Spanish Front |
| FINISH | All Models | All Models | All Models | All Models | All Models |
| Matt Black | 901-425 | 901-024 | 901-159 | 912-020 | 912-083 |
| Polished Brass Effect | 901-530 | 901-061 | 901-164 | 912-226 | 912-160 |
| Highlight Polished | 901-296 | 901-092 | 901-185 | 912-257 | 912-127 |
| Polished Chrome | 901-476 | 901-083 | 901-170 | 912-392 | 912-216 |

* A Box Profil2 Frame or Arts2 Frame must be used in conjunction with an Arts, Wave, Chartwell, Holyrood or Spanish Front



Installation Instructions

Technical Specification

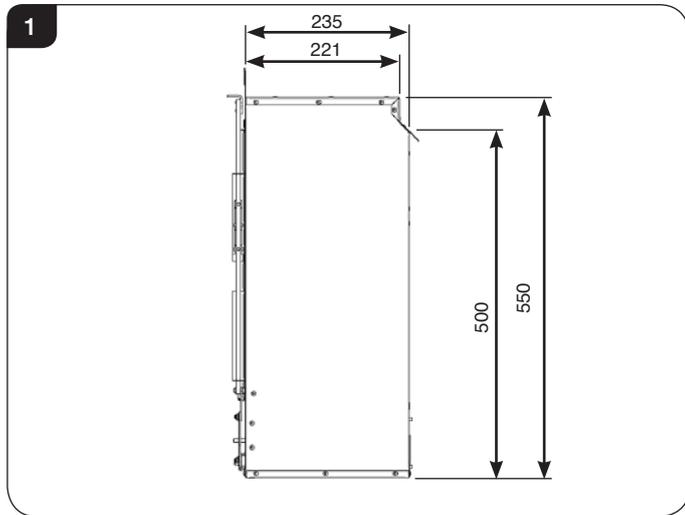

**OVERALL EXTERNAL
DIMENSIONS
SIDE VIEWS**

**MINIMUM DEBRIS COLLECTION
SPACE REQUIREMENTS
(EXISTING MASONRY CHIMNEYS OR
PREFABRICATED METAL FLUE BOX)**

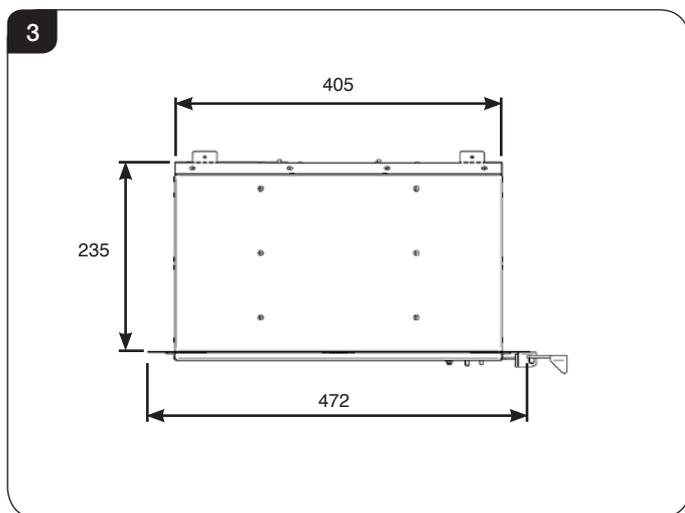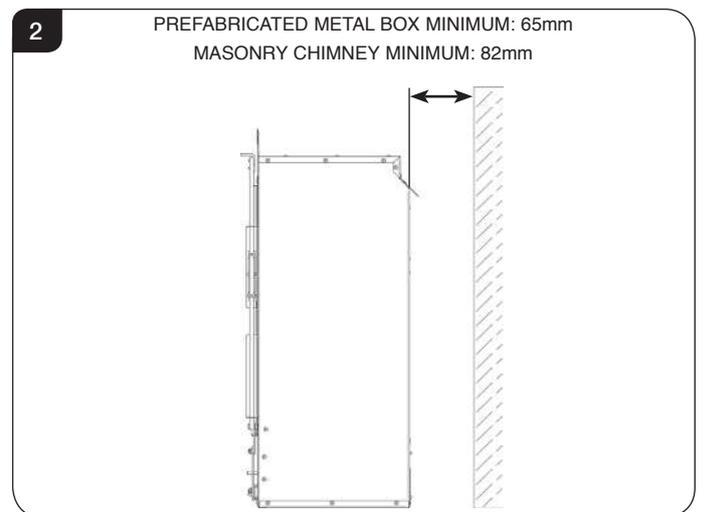

**OVERALL EXTERNAL
DIMENSIONS
PLAN VIEW**

Installation Instructions

Site Requirements

1. Flue & Chimney Requirements

- 1.1 The chimney or flue system must comply with the rules in force, and must be a minimum of 125mm (5") in diameter.

The appliance can also be fitted into a LFE type (non recessed) metal flue box with a 5" (125mm) diameter prefabricated metal flue system or flexible liner. Refer to Diagram 1, Pre Fab Metal Box for dimensions.


* Class 1 flues. Chimneys over 9" x 9" must be lined.

- 1.2 The minimum effective height of the flue or chimney must be 3 m (10ft).
- 1.3 The chimney or flue must be free from any obstruction. Any damper plates should be removed or secured in the fully open position, and no restrictor plates should be fitted.
- 1.4 The chimney should be swept immediately before installing the appliance, but it need not be swept if you can see the chimney is clean and free from obstruction throughout.
- 1.5 Ensure that there is a smooth taper transition from the fireplace opening into the chimney or flue.
- 1.6 The flue pull should be checked prior to installation of the appliance. Apply a smoke pellet to the flue or chimney opening and ensure that the smoke is drawn into the opening. If there is not a definite flow, preheat the chimney for a few minutes and re-test the flow.

IF THERE IS STILL NO DEFINITE FLOW, THE CHIMNEY MAY REQUIRE ATTENTION - SEEK EXPERT ADVICE.

2. Appliance Location


- 2.1 This appliance must stand on a non combustible hearth that is at least 12mm thick. If the appliance is greater than 50mm above the floor, then no hearth is required, although due consideration should be given to how the heat may affect the floor material.
- 2.2 **NOTE: It is recommended you construct the back panel of the fireplace from natural materials cut into three or more sections to prevent cracking. Resin-based materials may not be suitable. This appliance is an effective heat producer and attention must be paid to the construction and finish of the fireplace.**
- 2.3 These appliances must be hearth mounted into a non-combustible opening to National Standards. The minimum dimensions shall be as shown in Diagram 1.

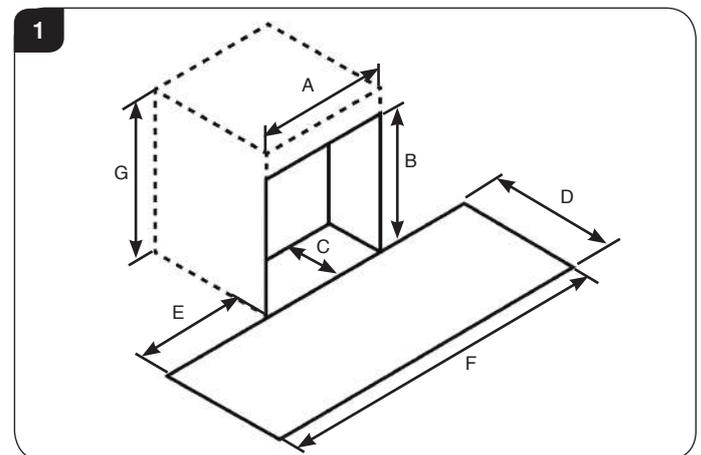

| Flue Type Dimension | Brick Built Class 1 | Pre Fab Metal Box |
|---------------------|---------------------|-------------------|
| A | 410 | 407 |
| B | 560 | 560 |
| C | 350 | 300 |
| D | 300 | 300 |
| E | 150 | 150 |
| F | 710 | 707 |
| G | - | 600 |

Site Requirements

- 2.4 This appliance must stand on a non-combustible hearth that is at least 12mm thick.
- 2.5 If the appliance is greater than 50mm above the floor, then no hearth is required, although due consideration should be given to how the heat may affect the floor material.
- 2.6 Ensure that no naked flame or incandescent part of the fire bed projects beyond the vertical plane of the fireplace opening.
- 2.7 The appliance must not be installed in any room that contains a bath or shower.
- 2.8 Ensure clearances to combustible materials, see Diagram 2.

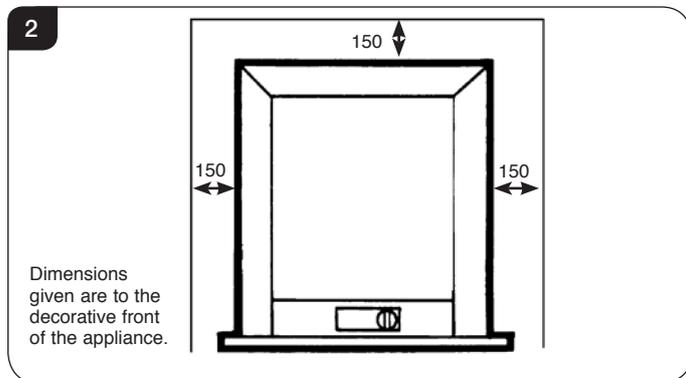

- 2.9 The maximum depth of combustibile shelf is 150mm at a minimum height of 150mm above the decorative front. **Refer to the appropriate Frame Instructions regarding additional wall strengthening for the frame.**

3. Gas Supply

- 3.1 Make sure local distribution conditions (identification of the type of gas and pressure) and the adjustment of the appliance are compatible before installation.
- 3.2 Ensure the gas supply delivers the required amount of gas and is in accordance with the rules in force.
- 3.3 This appliance is supplied complete with a factory fitted isolation device incorporated into the inlet connection, no further isolation device is therefore required.

4. Ventilation

IMPORTANT: Ensure any national ventilation requirements are taken into account during installation of the appliance.

- 4.1 This appliance has a nominal input not exceeding 7.0kW and therefore does not normally require any additional permanent ventilation. If, however, spillage is detected when commissioning the appliance, there may be insufficient natural ventilation and additional ventilation may be required.

FOR THE REPUBLIC OF IRELAND REFER TO THE RULES IN FORCE FOR VENTILATION REQUIREMENTS.

AIR VENTS MUST NOT BE RESTRICTED.

Installation Instructions

1. Safety Precautions

- 1.1 For your own and other's safety, you must install this appliance according to local and national codes of practice. Failure to install the appliance correctly could lead to prosecution. **Read these instructions before installing and using this appliance.**
- 1.2 These instructions must be left intact with the user.
- 1.3 Do not attempt to burn rubbish on this appliance.
- 1.4 Keep all plastic bags away from young children.
- 1.5 Do not place any object on or near to the appliance and allow adequate clearance above the appliance.

IF THE APPLIANCE IS EXTINGUISHED OR GOES OUT IN USE, WAIT 3 MINUTES BEFORE ATTEMPTING TO RELIGHT THE APPLIANCE.

- 1.6 The appliance is fitted with an oxygen sensitive pilot that will act to cut off the gas supply to the appliance in the event of incorrect operation of the flue. If the system acts to shut off the gas supply, this indicates that there is insufficient flue pull. Continued operation of this safety device means that there may be a serious problem with the flue system, and this should be inspected by a qualified gas engineer. **Do not use the appliance until an engineer says it is safe to do so.** The oxygen sensitive pilot must not be tampered with. Use only genuine Gazco replacement parts when servicing the appliance - refer to Servicing section.



IMPORTANT: REFER TO DATA BADGE AND TECHNICAL SPECIFICATION AT THE FRONT OF THE MANUAL TO ENSURE THE APPLIANCE IS CORRECTLY ADJUSTED FOR THE GAS TYPE AND CATEGORY APPLICABLE IN THE COUNTRY OF USE.

FOR DETAILS OF CHANGING BETWEEN GAS TYPES REFER TO SERVICING, SECTION 15, REPLACING PARTS.

Unpacking

- 1.7 Remove the appliance from its packaging, and check that it is complete and undamaged.

Put the loose ceramic parts to one side so that they are not damaged during installation.

2. Installation of the Gas Supply


For specific gas types and working pressures see Technical Specifications, page 9.

TO CHANGE FROM ONE GAS TYPE TO ANOTHER A CONVERSION KIT AND DATA BADGE WILL BE REQUIRED. SEE SECTION 10 REPLACING PARTS.

- 2.1 Before installation, ensure that the local distribution conditions (identification of the type of gas and pressure) and the adjustment of the appliance are compatible. See Technical Specification on page 10.
- 2.2 Ensure that the gas supply is capable of delivering the required amount of gas and is in accordance with the rules in force. Please refer to the technical specification for the correct working pressure for the gas used.
- 2.3 Soft copper tubing and soft soldered joints can be used but must not be closer than 50mm (2") to the underside of the burner.
- 2.4 An isolation device is provided with the appliance.
- 2.5 All supply gas pipes must be purged of any debris that may have entered, prior to connection to the appliance.
- 2.6 This appliance is intended for use on a gas installation with a governed meter.

3. Removing the Glass Frame

- 3.1 Remove the glass frame by removing the 4 screws in the retaining bracket, see Diagram 1.
- 3.2 Tilt the top of the glass frame forward and disengage the lower location tabs from the slots in the firebox, see Diagram 1, Detail A. Place carefully to one side.

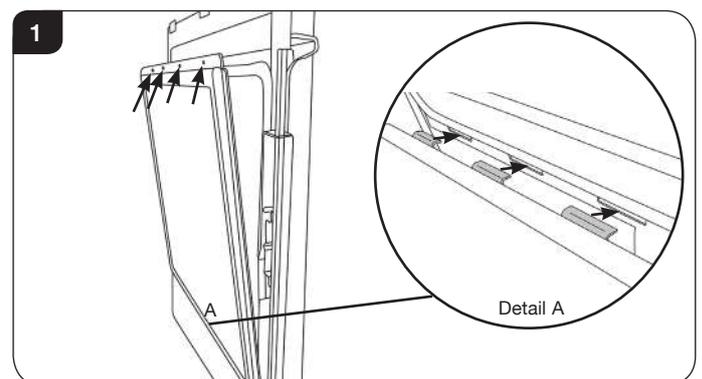

Installation Instructions


4. Installation of the Appliance

- 4.1 Ensure that the fireplace opening is in compliance with Section 2 Site Requirements.
- 4.2 There are 2 methods of installation:
 - 4a) Cable Retention method
 - 4b) Screw Fixing Method


4a) Cable Retention Method

For this method of installation it will be necessary to remove the main burner and control assembly.


- 4a.1 Remove the 2 screws at the front of the burner tray, see Diagram 2.

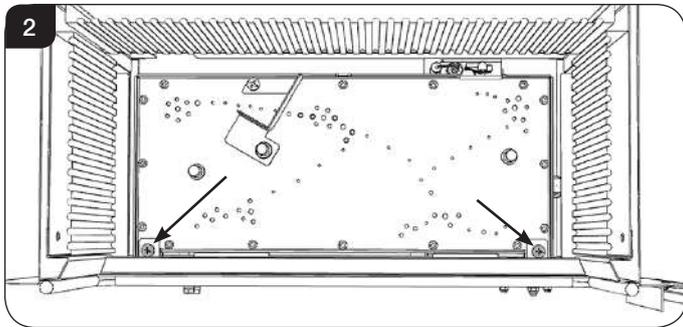

- 4a.2 Remove the decorative lip from the front of the fire, see Diagram 3.


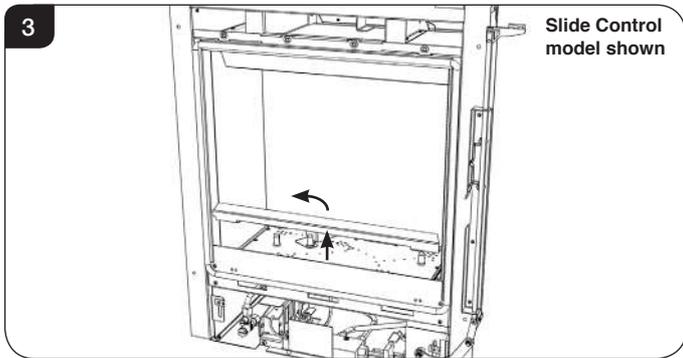


- 4a.3 Lift the left hand side of the burner tray to disengage from the injector, before lifting the right hand side, see Diagram 4.

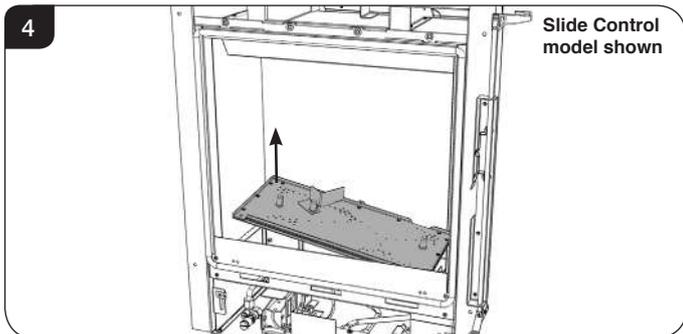

- 4a.4 Slide the burner tray fully to the left and remove through the front of the firebox, see Diagram 4.


- 4a.5 Remove the 2 wing nuts, see Diagrams 5 & 6.

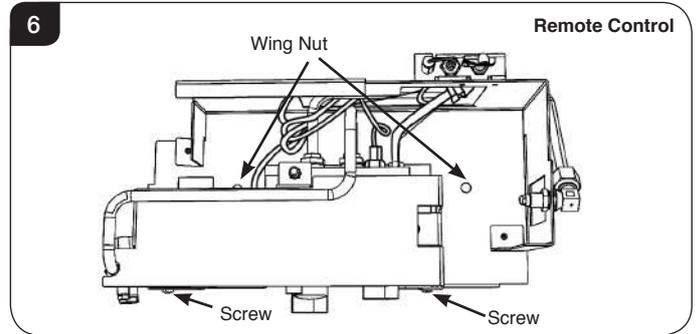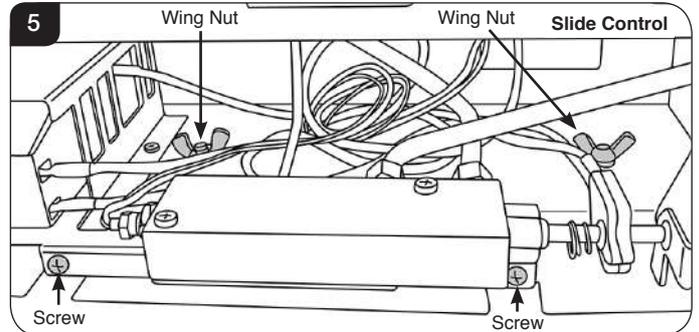

- 4a.6 Remove the 2 screws, see Diagrams 5 & 6.

Slide Control only



- 4a.7 Remove the M4 lock nut and spacer securing the slider arm to the appliance and loosen the 2 nuts, see Diagram 7. **Ensure that the spacer is retained and replaced when the control assembly is reinstalled.**

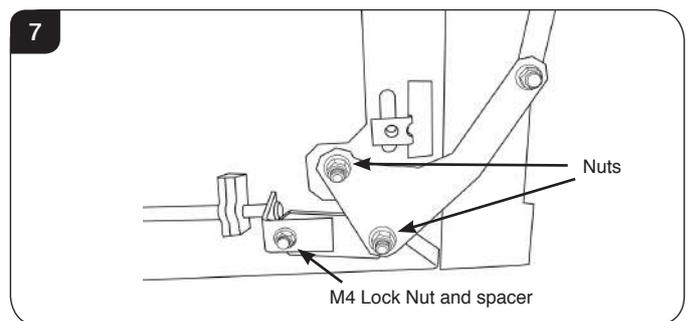

Installation Instructions


All Models

4a.8 Lift the control assembly, move to the left and angle forward to remove through the front of the firebox, see Diagrams 8 & 9.

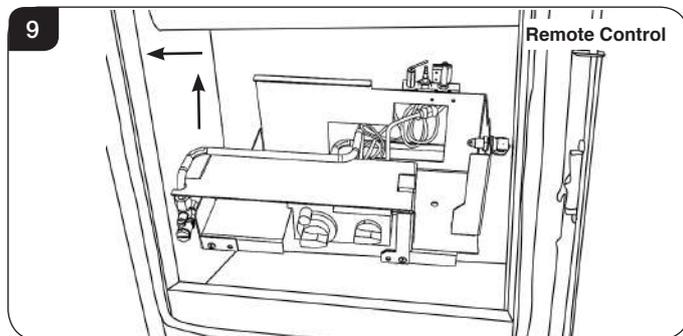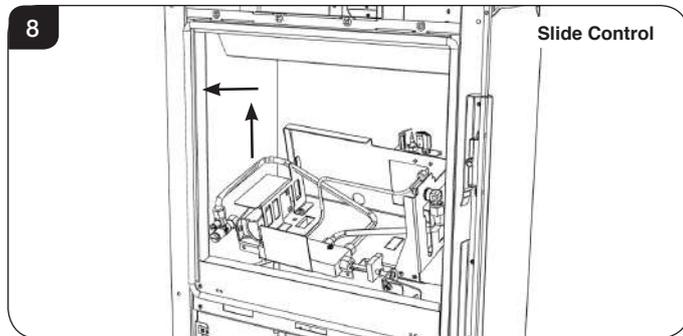


Take care not to damage the liners.


4a.9 Undo the screws and remove the convector air panel, see Diagram 10.

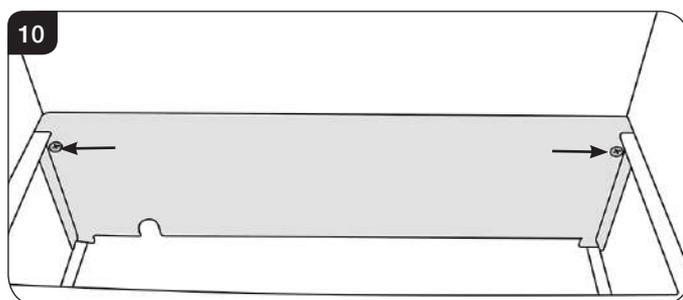

4a.10 Remove the 2 knockout holes on the rear of the box using a sharp hammer blow, see Diagram 11.

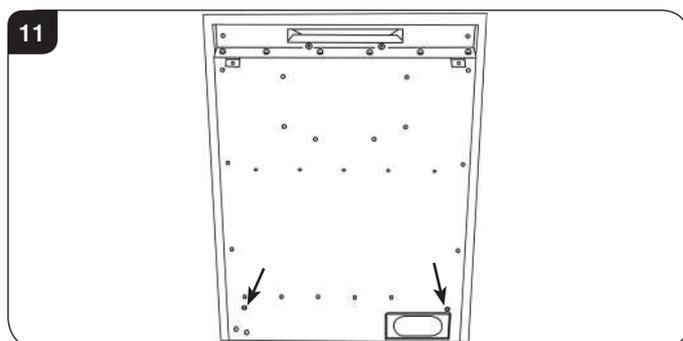


4a.11 Remove the backing from the self-adhesive silicone sealing strip and apply to the rear flange of the firebox ensuring that it is positioned as close to the outer edge as is practically possible, see Diagram 12, Arrow A.

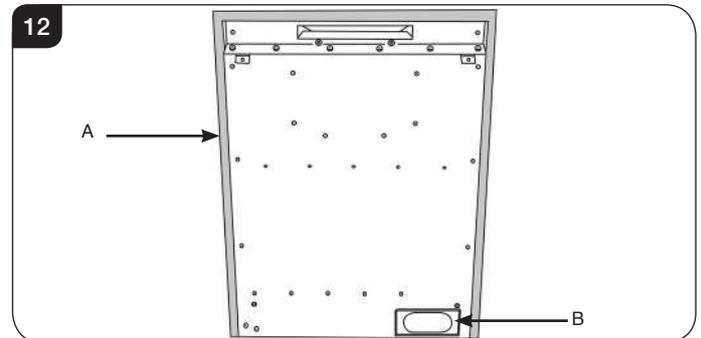


4a.12 Gas pipe entry must come through the rear of the box on the right-hand side. The rubber seal must be cut using a sharp knife to allow the isolating elbow to pass through it. Ensure the rubber is not damaged when doing this, see Diagram 12, Arrow B.

A means of isolation is provided with the appliance. This must be fitted to the supply pipe prior to installing the firebox.

4a.13 Mark the position of the 4 fixing holes on the rear of the fireplace opening and drill the holes using a 7mm masonry drill bit. Insert the 4 steel expansion plugs and screw the eyebolts in as far as possible leaving the eye horizontal, see Diagram 13.

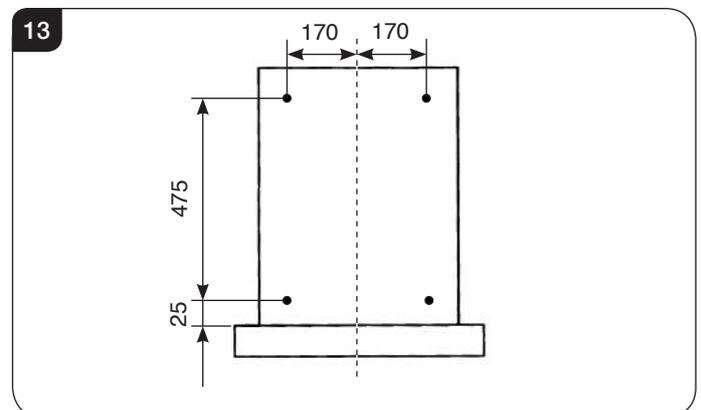


4a.14 Pass the 2 cables through the holes in the brackets on the back of the firebox and pull taut so that the stop ends sit tightly against the top of the brackets, see Diagram 14.

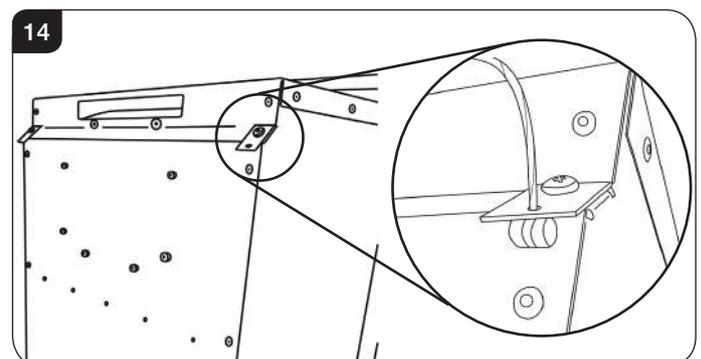


Installation Instructions

- 4a.15 Pass the cables vertically through the 2 sets of eyebolts, see Diagram 15.

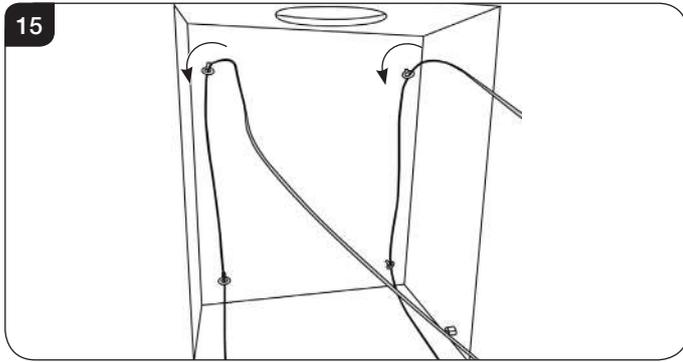


- 4a.16 Thread the ends through the holes in the lower back of the firebox. Pass the gas supply pipe through the hole in the rubber seal and push the appliance into place.

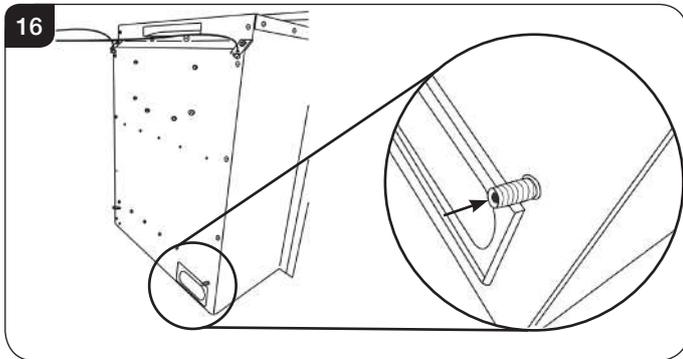

- 4a.17 Thread the cables through the tensioner bolts and push the threaded portions through the holes in the firebox so that the lock nut sits against the back wall (ensure that the nut is screwed fully up to the head of the tensioner to allow maximum adjustment).

- 4a.18 Slide the locking nipples onto the cables, pull the cables taut and tighten the locking screw. Adjust the lock nuts using a 10mm spanner until the silicone sealing strip forms a tight seal between the fireplace opening and the firebox flange, see Diagram 17.

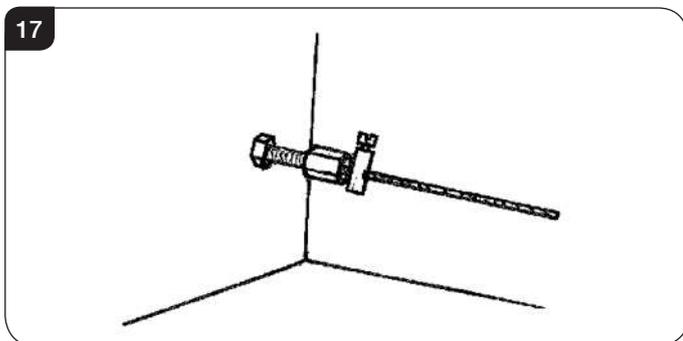

- 4a.19 Coil up the surplus cable and locate in the back of the firebox.

NEVER SHORTEN THE CABLES, THEY WILL BE REQUIRED WHEN SERVICING THE APPLIANCE.


- 4a.20 Replace the lower cover plate.
Note: The cable adjuster may need to be tucked upward in order to fit the lower cover plate.

- 4a.21 Replace the control assembly and burner, ensuring the front of locates in front of the tabs on the base of the firebox.


Take care not to damage the liners.

4b) Screw Fixing Method

- 4b.1 Alternatively, this appliance can be secured back to the fireplace opening using the screws and expansion plugs provided.
- 4b.2 Remove the backing from the self-adhesive silicone sealing strip and apply to the rear flange of the firebox ensuring that it is positioned as close to the outer edge as is practically possible, see Diagram 18, Arrow A.

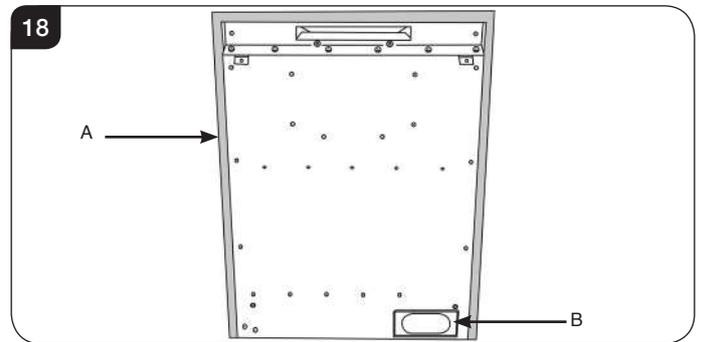

- 4b.3 Place the firebox centrally in the opening and mark the positions of the 4 fixing holes. Drill the holes and insert the 4 expansion plugs, see Diagram 19.

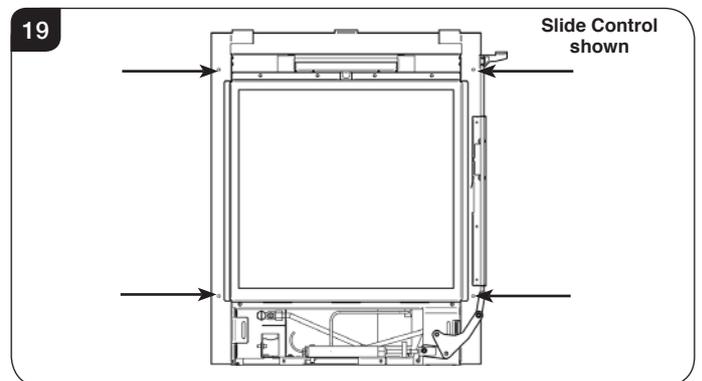

- 4b.4 Offer the firebox into the opening and ensure that the gas supply pipe passes through the rubber seal.
- 4b.5 Secure the appliance through the 4 fixing holes, see Diagram 19.


Installation Instructions

Foam Seal (Slide Control Models only)

The foam seal must be fitted to the appliance prior to attaching the decorative front.



- 4b.6 On the right hand side of the appliance, place the foam seal in the channel between the glass frame and the slide control housing, see Diagram 20.

The foam seal must align with the right hand side of the glass frame and 24mm below the top of the appliance flange, see Diagram 20.

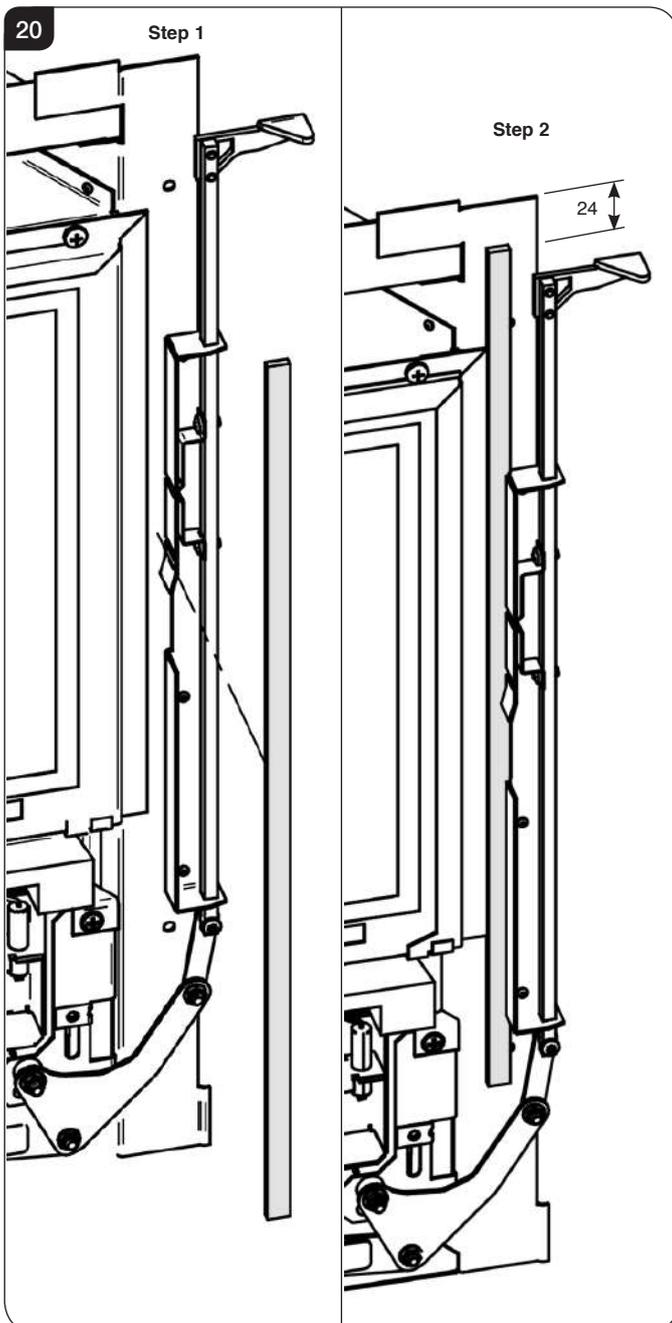

5. Gas Supply

- 5.1 Connect the gas supply to the inlet connection on the control assembly and tighten. It may be necessary to support the inlet connection with another spanner whilst tightening this joint, see Diagrams 21 & 22.

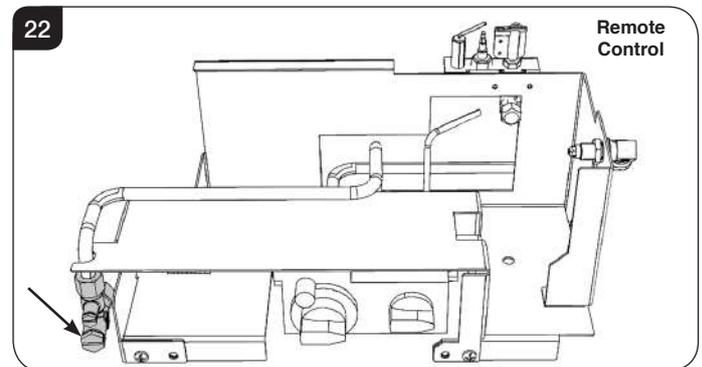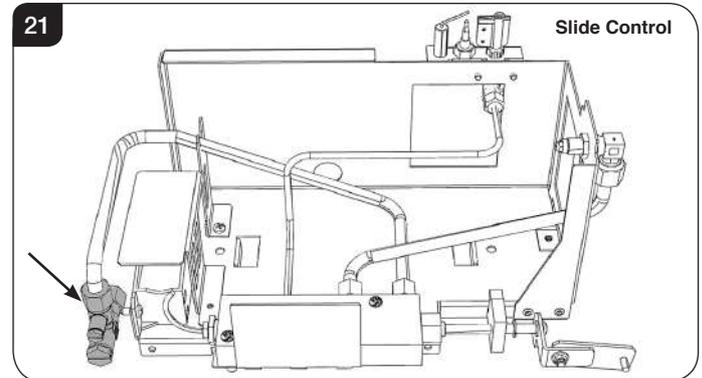

- 5.2 Turn on the gas supply to the appliance and check for leaks.
- 5.3 Remove the pressure test point screw from the inlet connection and connect a suitable "U" gauge manometer.
- 5.4 Carefully refit the main burner.
- 5.5 Light the appliance, turn to maximum and check that the supply pressure is as stated on the databadge. If the pressure varies significantly from that on the data badge, this may indicate a supply problem and will require immediate attention.
- 5.6 Turn the appliance off and remove the main burner.
- 5.7 Disconnect the "U" gauge and replace the pressure test point screw. Check the pressure test point screw for leaks.
- 5.8 Carefully refit the main burner.

Installation Instructions

6. Arrangement of the Fuel Bed

Advice on handling and disposal of fire ceramics

! The fuel effect and side panels of this appliance are made from Refractory Ceramic Fibre (RCF), a material which is commonly used for this application.

Protective clothing is not required when handling these articles, but we recommend you follow normal hygiene rules of not smoking, eating or drinking in the work area and always wash your hands before eating or drinking.

To ensure that the release of RCF fibres are kept to a minimum, during installation and servicing a HEPA filtered vacuum is recommended to remove any dust accumulated in and around the appliance before and after working on it. When servicing the appliance it is recommended that the replaced items are not broken up, but are sealed within heavy duty polythene bags and labelled as RCF waste.


RCF waste is classed as stable, non-reactive hazardous waste and may be disposed of at a licensed landfill site.

Excessive exposure to these materials may cause temporary irritation to eyes, skin and respiratory tract; wash hands thoroughly after handling the material.


7. Log Layout

LOGS MUST BE POSITIONED ACCORDING TO THE FOLLOWING INSTRUCTIONS TO GIVE THE CORRECT FLAME EFFECT.


7.1 Ensure the burner tray is clean and free from any debris, see Diagram 23.

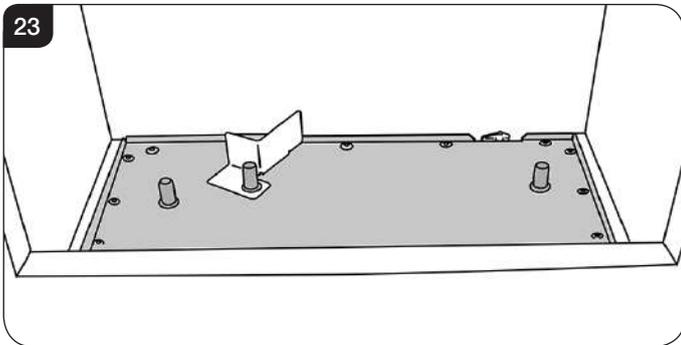


7.2 Place Log A in position on the 2 locating pins, see Diagram 24.

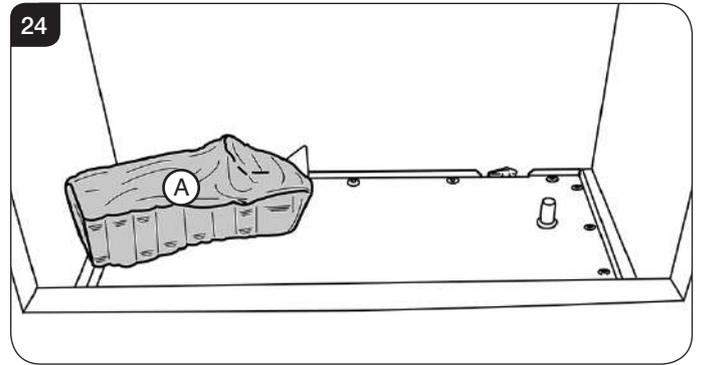

7.3 Spread the Lava Rock evenly over the fuel bed and around Log A, see Diagram 25.

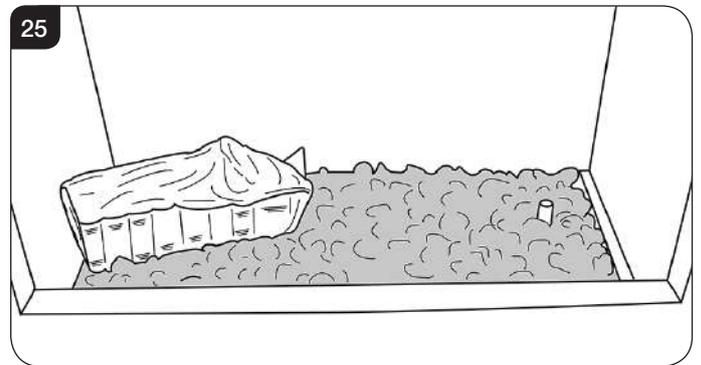


7.4 Log B is positioned on the right hand locating pin, and rests against the back liner, see Diagram 26.

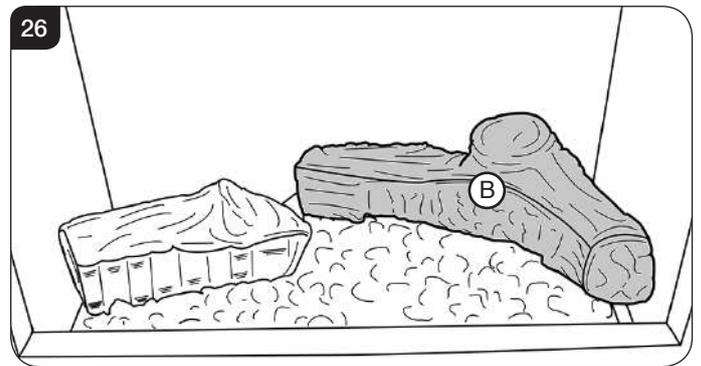


Installation Instructions


- 7.5 Log C rests on Log A and the front tray with the locating pin facing up, see Diagram 27.

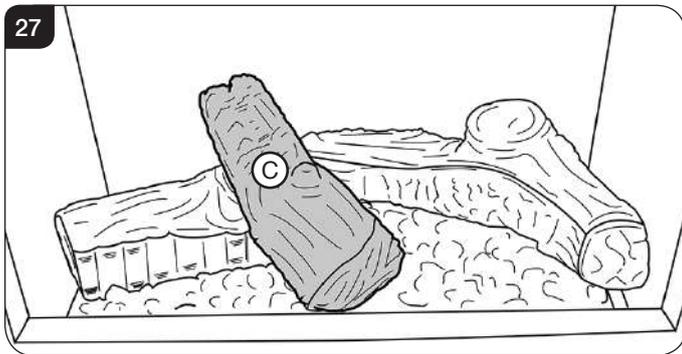


- 7.6 Log D fits onto the locating pin and rests on Log B, see Diagram 28.

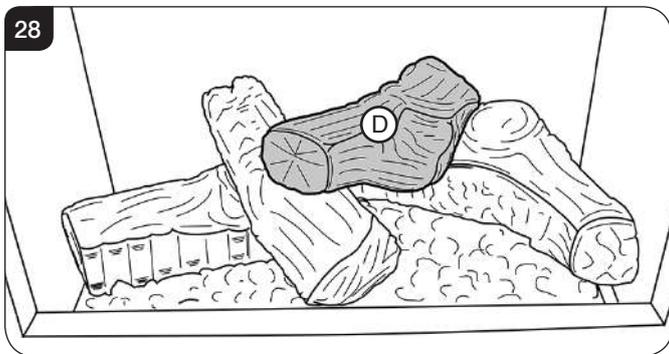

- 7.7 Position the 2 embers in the front right and back left corners, see Diagram 29.

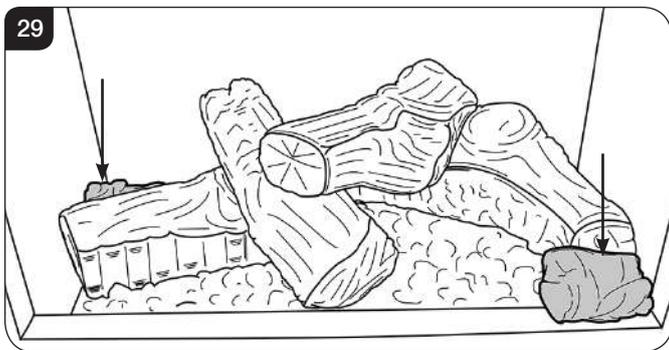


- 7.8 Sparingly spread an amount of the Embaglow fibres provided on the sections highlighted, see Diagram 30. Take care not to use more than half a packet per application.
WARNING - DO NOT PLACE NEAR THE PILOT AREA.

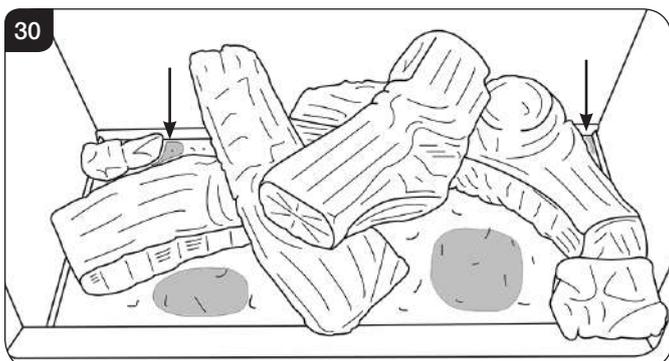

8. Fitting the Glass Frame

- 8.1 Ensure that the rope seal on the box is intact, then locate the glass frame location tabs into the slots on the firebox, see Diagram 31, Detail A.
- 8.2 Secure the glass frame using 4 screws in the retaining bracket, see Diagram 31. Replace ALL of the glass frame securing screws ensuring that a screw is present in all fixing slots.

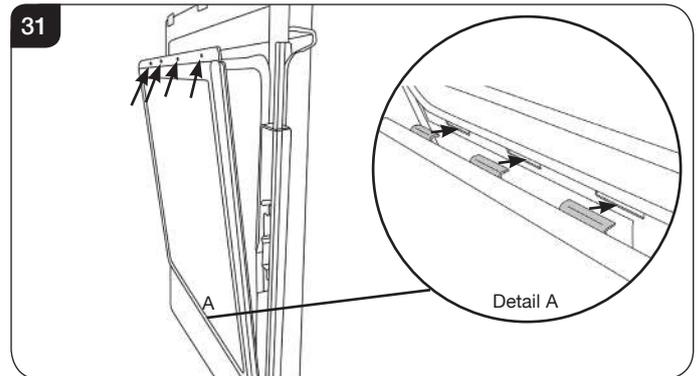

NEVER OPERATE THE APPLIANCE WHEN THE GLASS FRAME IS REMOVED OR BROKEN.

Refer to the separate decorative front Instructions to replace the front on the appliance.



UNDER NO CIRCUMSTANCES SHOULD THE APPLIANCE BE USED IF ANY OF THE GLASS FRAME RETAINING SCREWS ARE LOOSE OR MISSING.

9. Operating the Appliance

- 9.1 There are 2 types of control systems available for this appliance:

- 9a. Remote Control
- 9b. Slide Control

Follow the relevant section for specific operation.

Installation Instructions


9a. Remote Control

The control valve is at the foot on the right-hand side of the appliance. It has two controls, see Diagram 32.

1. The right-hand knob controls the pilot ignition.
2. The left-hand knob controls the main burner.

Lighting the Pilot

- 9a.1 To start the left-hand and right-hand control knobs must both point to off (●):

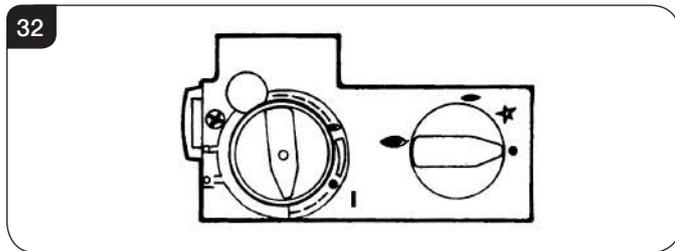

- 9a.2 Press in the right-hand control knob and rotate anti-clockwise until a click is heard. Continue to press in. The knob points to the pilot (←).

The pilot is lit.

- 9a.3 Keep the knob depressed for 10 seconds before releasing. The pilot remains lit.

Repeat the above steps if the pilot does not stay lit.

NOTE: If the pilot goes out, the Interlock system prevents you lighting again for a short period.


- 9a.4 If, after repeating the above steps the pilot does not light, contact your Retailer or Installer.

- 9a.5 Turn the right-hand control to point to main burner (↔). The appliance can now be controlled by the remote handset.

- 9a.6 The Standard remote controls the appliance when:

- the pilot is lit.
- the right-hand control points to main burner (↔) ready to operate position.

It regulates the temperature from low to high and back. It can also turn the main burner off leaving just the pilot burning and ready to operate.

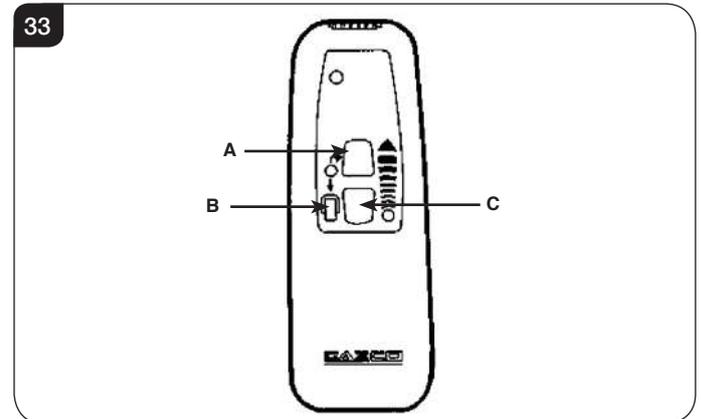

To light the main burner:

- 9a.7 Press buttons A & B simultaneously. The remote's LED light flashes to show communication between the appliance's controls and the remote.

Adjusting the Flame height:

- 9a.8 Press and hold buttons A & B simultaneously to increase the flame height. A clicking sound indicates that the appliance is at maximum.

- 9a.9 Press and hold button C to decrease the flame height. Continue to press C to turn off the main burner.

To make small adjustments to flame height:

- 9a.10 Press and hold down button B and press button A once to make a slight increase. This increases the temperature by stages.

Repeat to further adjust.

- 9a.11 Press button C once to slightly reduce the flame height.



IMPORTANT: YELLOW FLAMES TYPICALLY APPEAR WHEN THE APPLIANCE HAS REACHED NORMAL OPERATING TEMPERATURE. THIS CAN TAKE UP TO 30 MINUTES.



WARNING: IF THE APPLIANCE FAILS TO LIGHT OR BECOMES EXTINGUISHED IN USE, WAIT 3 MINUTES BEFORE ATTEMPTING TO RELIGHT.

Installation Instructions

Switching OFF the Appliance

THE REMOTE CONTROL CAN TURN THE MAIN BURNER OFF AND LEAVE THE PILOT BURNING AND READY TO OPERATE .

- 9a.12 To switch off the appliance completely (no pilot burning) return both control knobs to the off position (●).

Remote Control

- 9a.13 To turn the main burner of the appliance off using the hand-set press and keep pressing the Off button (●).

The main burner goes out leaving the pilot burning and ready to operate .

Controls on Appliance

- 9a.14 Use the controls on the appliance to turn the appliance off by turning the left-hand control knob until it points to Off (●). A click is heard and the main burner goes out leaving the pilot burning and ready to operate .

CAUTION: IN RARE INSTANCES, NOISES FROM SOURCES OUTSIDE THE REMOTE CAN OPERATE THE MAIN BURNER. IF THIS OCCURS, ALWAYS TURN THE CONTROL TO PILOT (●) OR OFF.

Upgrading the Appliance

- 9a.15 The appliance is fitted with a control valve that can easily be upgraded. This can be obtained through your local Gazco retailer. There is no requirement for this upgrade to be carried out by an approved GasSafe engineer. However Gazco recommend that this task is undertaken by a suitably competent person.
- 9a.16 This upgrade can be fitted before or after installation but if side clearances are limited then it will be easier to upgrade the appliance before installation. Full instructions are included with the kit.

Thermostatic and Timer Remote Control (PART NUMBER 8456)

- 9a.17 This remote control can control the gas appliance after the pilot has been lit.

MANUAL MODE

Can be used to turn the main burner on and manually regulate it from low through to high and back again. It can also be used to turn the main burner off leaving the pilot burning.

AUTO MODE

Will automatically regulate the room to a pre-set temperature.


TIMER MODE

Will turn the appliance on and off according to a pre-set programme and automatically regulate the room temperature during the two on periods.

9b. Slide Control

This appliance is operated using the slide control on the top right hand side of the decorative front.

When the appliance is OFF the slide control will be at the highest point, see Diagram 34.

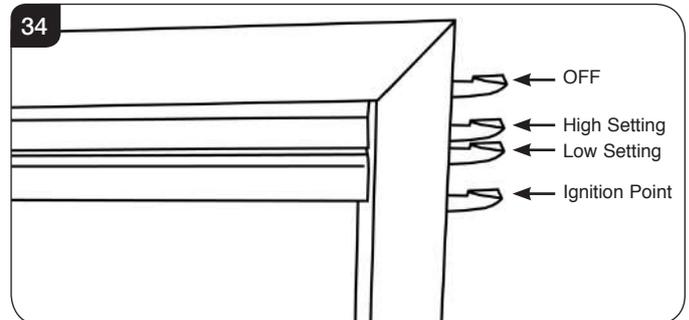

Lighting the Pilot

- 9b.1 Push the slide control down as far as possible to its lowest point, see Diagram 34, this is the ignition point.

Keep the slide control pressed down for 5 seconds to ensure the pilot is lit. Then release.

The appliance should light on its lowest setting.

- 9b.2 When released the slide control automatically raises to a natural stop point, see Diagram 34.

Repeat the above steps if the appliance does not light.

- 9b.3 If, after repeating the above steps the pilot does not light, contact your Retailer or Installer.

Adjusting the Flame height

- 9b.4 Increase the flame height and temperature by carefully moving the slide control up until the next stop point is felt, see Diagram 33. This denotes the highest setting.

- 9b.5 Carefully move the slide control down to the lower stop point to return to the lowest setting.



IMPORTANT: YELLOW FLAMES TYPICALLY APPEAR WHEN THE APPLIANCE HAS REACHED NORMAL OPERATING TEMPERATURE. THIS CAN TAKE UP TO 30 MINUTES.



WARNING: IF THE APPLIANCE FAILS TO LIGHT OR BECOMES EXTINGUISHED IN USE, WAIT 3 MINUTES BEFORE ATTEMPTING TO RELIGHT.


Switching OFF the Appliance

- 9b.6 To turn the appliance off lift the slide control to its highest stop point, see Diagram 34. The pilot goes out.

Commissioning

1. Commissioning

- 1.1 Close all windows and doors to the room, check all controls, and allow appliance to burn on maximum for 5 minutes. Test for spillage of flue products using a smoke match. Pass the lighted smoke match along the top front of the draught diverter, just inside, see Diagram 1.

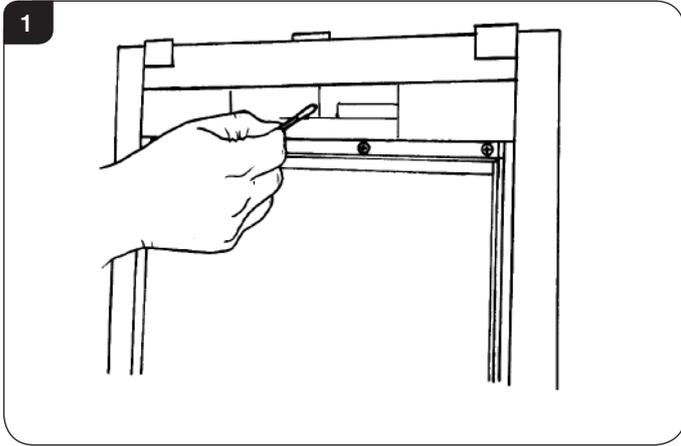

- 1.2 If the appliance spills, run for a further 10 minutes and re-check.

If there are any extractor fans in the room or adjacent rooms, the test must be repeated with the fans running on maximum.

IF SPILLAGE PERSISTS, DISCONNECT THE APPLIANCE AND SEEK EXPERT ADVICE.

- 1.3 Complete the Commissioning Checklist at the front of this manual covering:
- Thermocouple soundness checks.
This is to include ensuring the thermocouple is secure on the pilot bracket assembly, lead connection and integrity.
 - Flue checks
 - Gas checks
 - Fuel effect layout - flame picture
- 1.4 Upon completion of the commissioning and testing of the installation and correct operation of the appliance, the installer must instruct the user how to operate the appliance.
- 1.5 Guide the user through the User Instructions paying particular attention to:
- a) Regular servicing (Section 10 of the User Instructions).
 - b) Ventilation (Section 11 of the User Instructions) - point out the ventilation positions where applicable.
 - c) Hot surfaces (Section 13 of the User Instructions).

For future reference record the installation details on the commissioning sheet on page 3 of these instructions.

Servicing Instructions

Servicing/Fault Finding Charts

1. Servicing Requirements

IMPORTANT – The glass panel on this appliance should be checked for any signs of damage on the front face of the glass panel (scratches, scores, cracks or other surface defects). If damage is observed, the glass panel must be replaced and the appliance must not be used until a replacement is installed. Under no circumstances should the appliance be used if any damage is observed. Please isolate the appliance until a replacement glass panel has been obtained and installed. Replacement glass panels can be purchased from Gazco via the retailer from which the appliance was purchased or any other Gazco distributor.

This appliance must be serviced at least once a year by a competent person.

All tests must be carried out in accordance with the current GasSafe recommendations.

1.1 Before Testing:

- Conduct a gas soundness test for the property ensuring there are no leaks before servicing.
- Check the operation of the appliance before testing.


1.2 Special checks:

- Clean the burner using a vacuum cleaner with a soft brush attachment. Ensure all debris is removed from the burner ports.
- Clean away lint or fluff from the pilot.
- Clean away lint or fluff from under the burner.
- Check the spark gap on the pilot is correct, see Diagram 1.
- Ensure that the glass frame is secured correctly and that all retaining screws are in place.
- Check debris collection space & clean if necessary.


1.3 Correct any faults found during the initial test.

1.4 Re-commission the appliance in accordance with Commissioning Procedures.

1.5 Advise the customer of any remedial work undertaken.

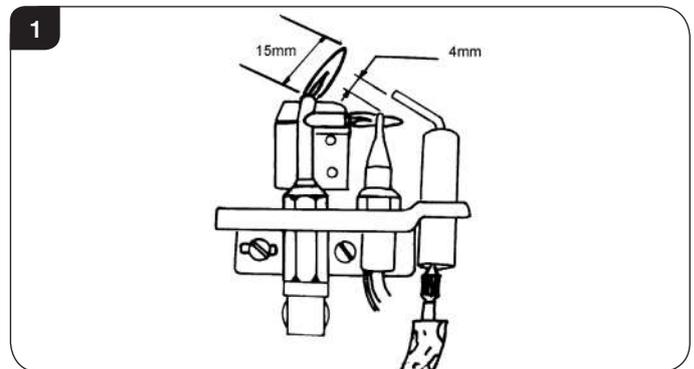


IGNITION FUNCTIONAL CHECK 1

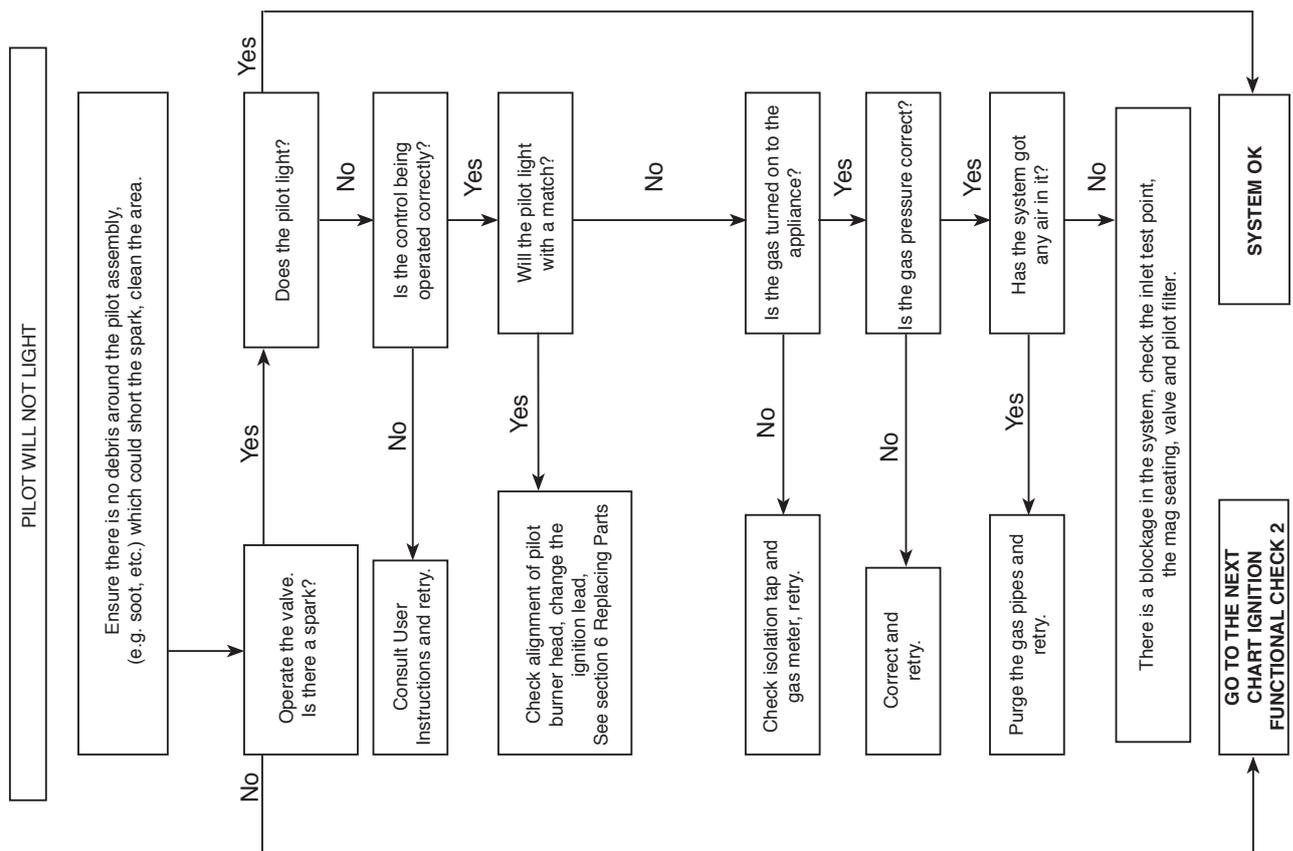


Servicing Instructions

Fault Finding Charts

IGNITION FUNCTIONAL CHECK 2B SLIDE CONTROL

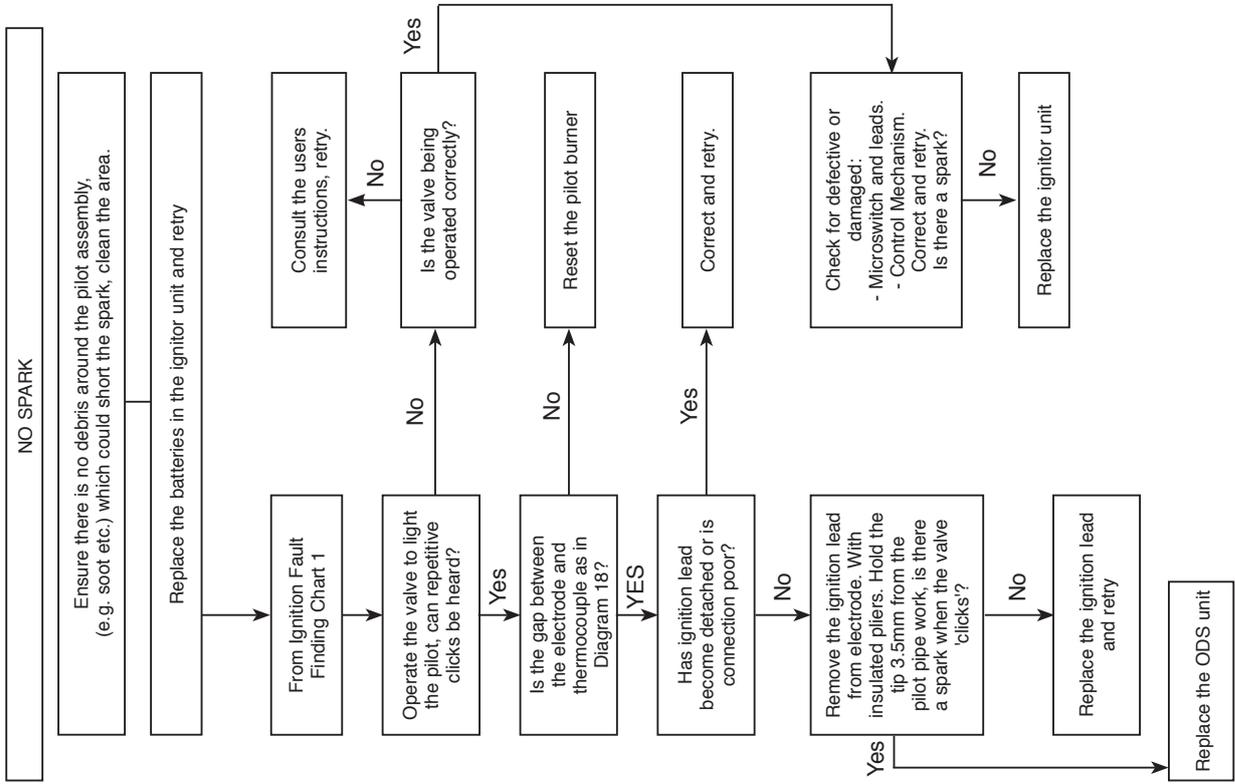

IGNITION FUNCTIONAL CHECK 2A REMOTE

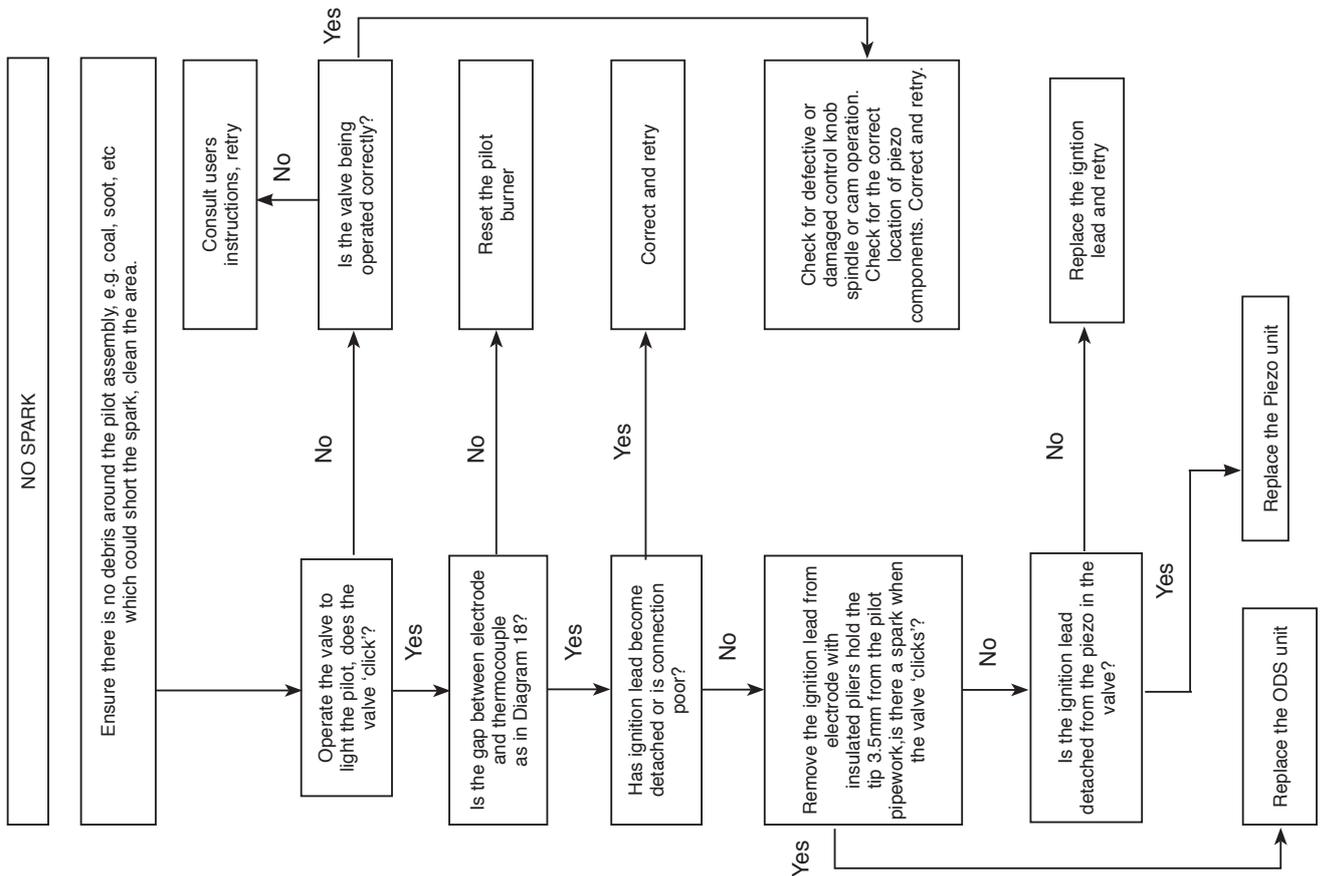

Servicing Instructions - Replacing Parts


1. Servicing

As part of the annual service, the space behind the firebox must be inspected for any debris, which may have fallen down the chimney.

- 1.1 To service the appliance first remove the decorative front. There are 2 screws securing the front to the appliance. Refer to separate instructions.

2. Removing the Glass Frame


- 2.1 Remove the glass frame by removing the 4 screws in the retaining bracket, see Diagram 1.

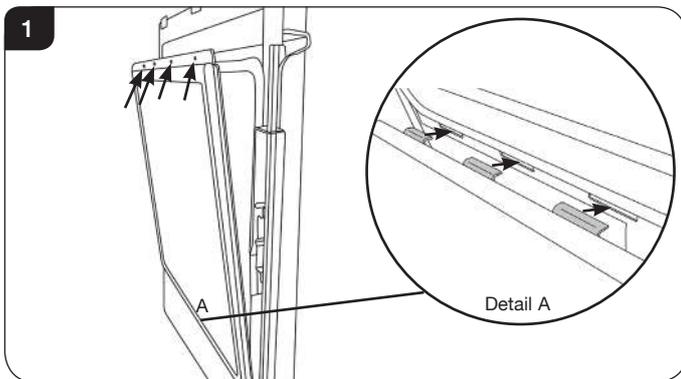

- 2.2 Tilt the top of the glass frame forward and disengage the lower location tabs from the slots in the firebox, see Diagram 1, Detail A. Place carefully to one side.
- 2.3 Remove the logs and Embaglow and place on a dry, clean surface.
- 2.4 The glass frame must be refitted to the appliance following cleaning or servicing. Ensure that the rope seal on the box is intact, then locate the glass frame location tabs into the slots on the firebox, see Diagram 1, Detail A.
- 2.5 Secure the glass frame using 4 screws in the retaining bracket, see Diagram 1. Replace ALL of the securing screws ensuring that a screw is present in all fixing slots.

NEVER OPERATE THE APPLIANCE WHEN THE GLASS FRAME IS REMOVED OR BROKEN.

Refer to the separate decorative front instructions to replace the front on the appliance.



3. Appliance Battery


- 3.1 Remove the battery before carrying out work on this appliance.

Remote Control

- 3.2 The battery box is located at the bottom left of the appliance behind the ash cover.


Slide Control

- 3.3 The battery box is located at the bottom left of the appliance, see Diagram 2.

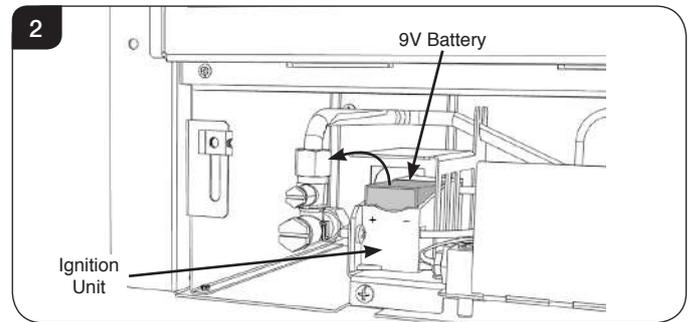


4. Main Burner

- 4.1 Remove the 2 screws at the front of the burner tray, see Diagram 3.

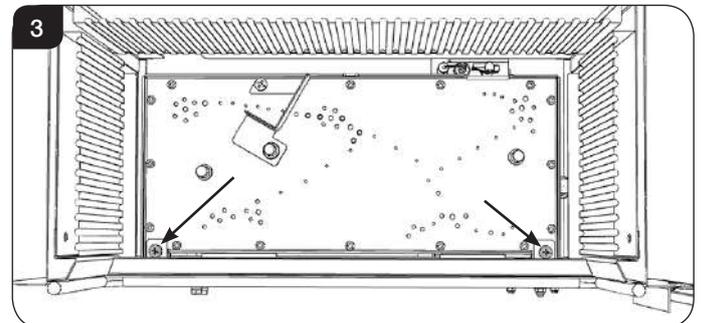


- 4.2 Remove the decorative lip from the front of the fire, see Diagram 4.

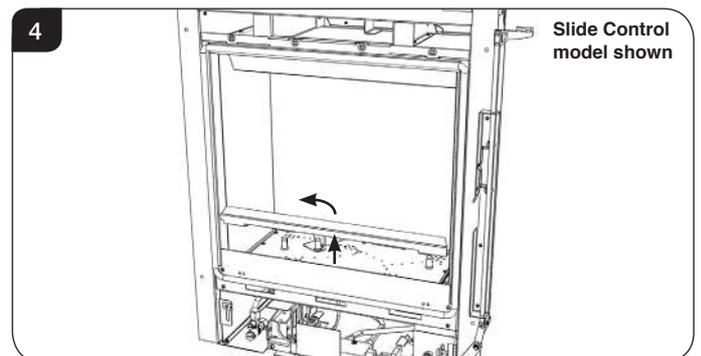

Servicing Instructions - Replacing Parts



- 4.3 Lift the left hand side of the burner tray to disengage from the injector, before lifting the right hand side, see Diagram 5.

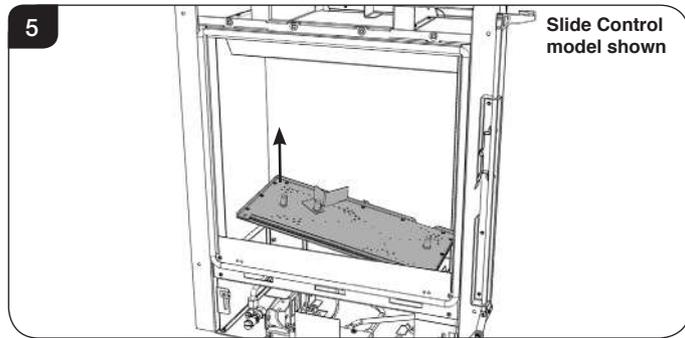

- 4.4 Slide the burner tray fully to the left and remove through the front of the firebox, see Diagram 5.

5. Control Assembly


- 5.1 Isolate and disconnect the gas supply at the Isolation elbow.
5.2 Remove the 2 wing nuts, see Diagrams 6 & 7.

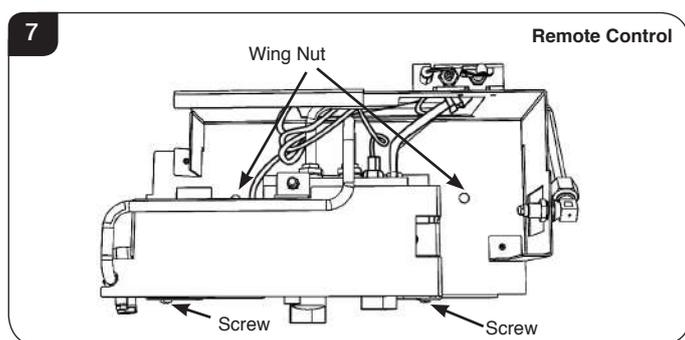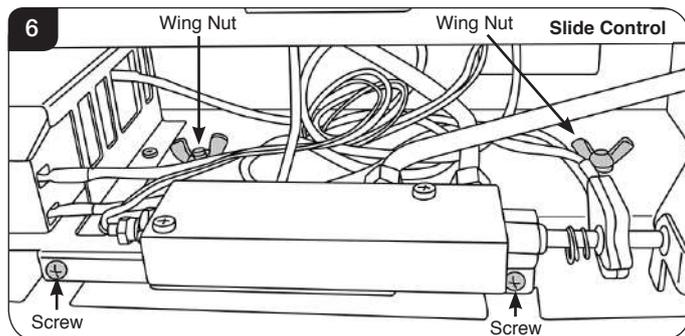

- 5.3 Remove the 2 screws, see Diagrams 6 & 7.



Slide Control only

- 5.4 Remove the M4 lock nut and spacer securing the slider arm to the appliance and loosen the 2 nuts, see Diagram 8. **Ensure that the spacer is retained and replaced when the control assembly is reinstalled.**

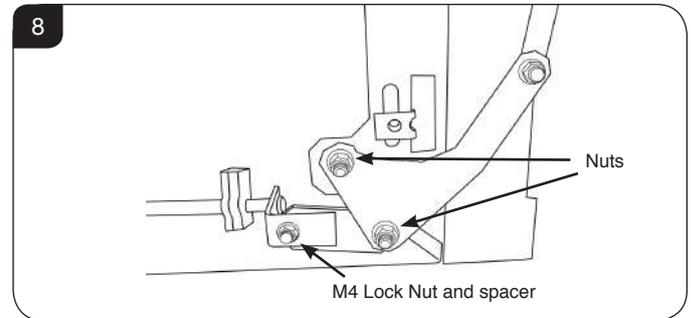

All Models

- 5.5 Lift the control assembly, move to the left and angle forward to remove through the front of the firebox, see Diagrams 9 & 10.

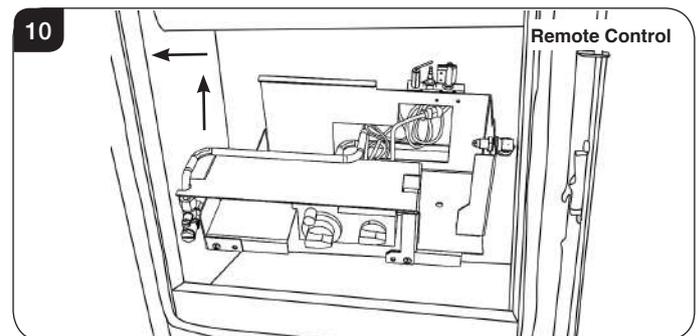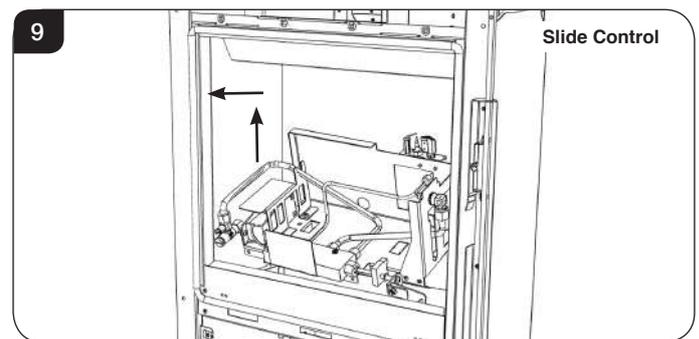

Take care not to damage the liners.


Servicing Instructions - Replacing Parts

6. Ignition Lead


- 6.1 The different control versions of this appliance have different servicing requirements for the Ignition Lead. Follow the relevant section for each product.

Remote Control


- 6.2 Undo the single screw that secures the left hand side of the control cover, see Diagram 11.

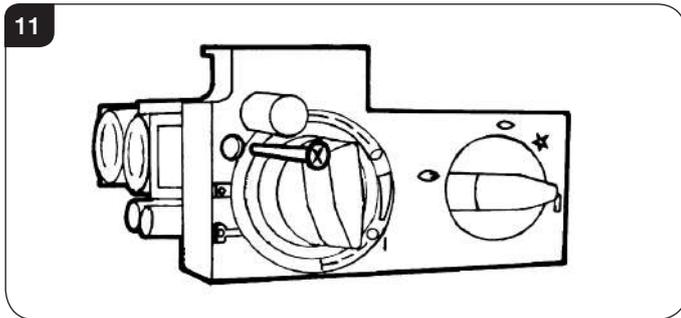

- 6.3 To release the right hand side of the control cover insert the narrow blade screwdriver into the slot shown in Diagram 12, lever it gently and pull from the right hand side at the same time. The cover will now come off, there is a small cylindrical metal spacer inside the cover, this must be kept and replaced on the fixing screw during re-assembly.

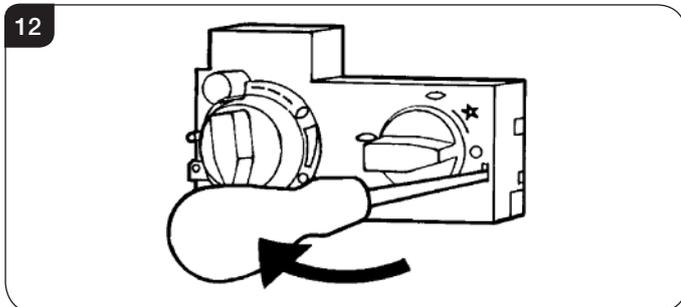


- 6.4 Disconnect the ignition lead from the gas valve and the pilot, see Diagram 13.

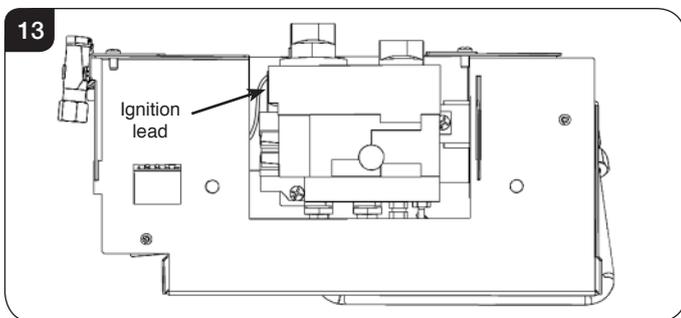

- 6.5 Replace with a new ignition lead following the same route as the old one. Replace the valve cover and the pilot assembly.
- 6.6 Refit the burner.
- 6.7 Check the operation of the new ignition lead.
- 6.8 Reassemble the appliance.

Slide Control

- 6.9 Disconnect the ignition lead from the ignition unit and the pilot unit, see Diagram 14.

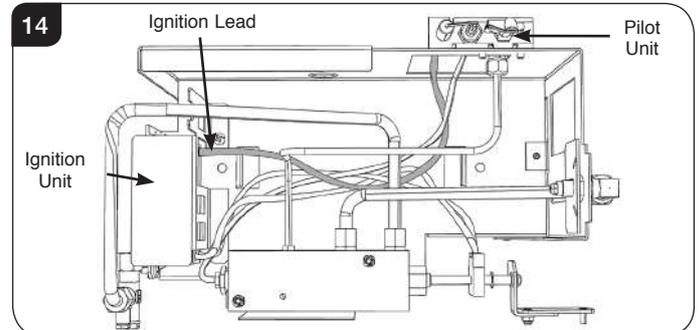

- 6.10 Remove the vidaflex from the old ignition lead.
- 6.11 Refit the vidaflex cover over the new ignition lead and fit following the same route as the old one.
- 6.12 Refit the burner.
- 6.13 Check the operation of the new ignition lead.
- 6.14 Reassemble the appliance.

7. Piezo (Remote only)

Note: For the Manual Control Valve the Ignition lead and Piezo are part of one complete unit and must be replaced at the same time, see Section 6.

Remote Control:

- 7.1 The Piezo assembly used on this appliance is not serviceable and is unlikely to fail. If a new piezo is required it will be necessary to change the gas valve, refer to Section 9.

8. ODS Pilot Unit



IMPORTANT: UNDER THE TERMS OF THE EXTENDED WARRANTY IT WILL BE COMPULSORY TO CHANGE THE COMPLETE PILOT UNIT ON THIS APPLIANCE IN YEARS 2 AND 4.

Note: The pilot unit on the appliance is a non serviceable unit due to the complex nature of its manufacture.


Replacement of the complete unit must be carried out when one of the following items becomes faulty:

- Pilot injector
- Ignition electrode
- Thermocouple



- 8.1 Remove the main burner, see Section 4.

Servicing Instructions - Replacing Parts


- 8.2 Gently pull the ignition lead off the electrode, see Diagram 15, Arrow A.
- 8.3 Remove the 2 screws securing the pilot assembly, see Diagram 15, Arrow B.

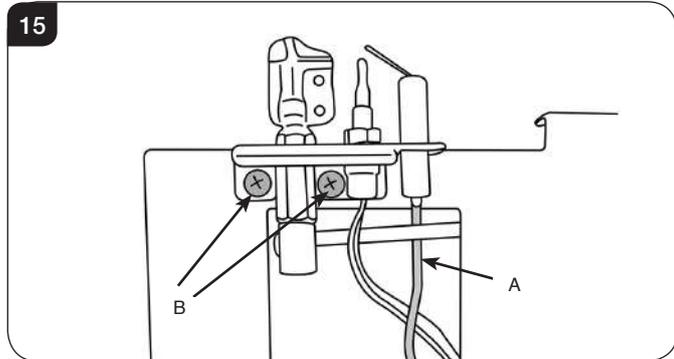

- 8.4 Undo the thermocouple connection from the gas valve, see Diagrams 16 & 17.
- 8.5 Undo the pilot pipe from the pilot unit, see Diagrams 16 & 17, arrow A and from the gas valve, see Diagrams 16 & 17, arrow B.

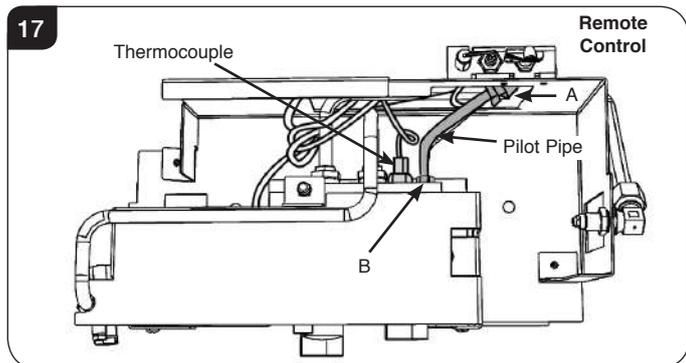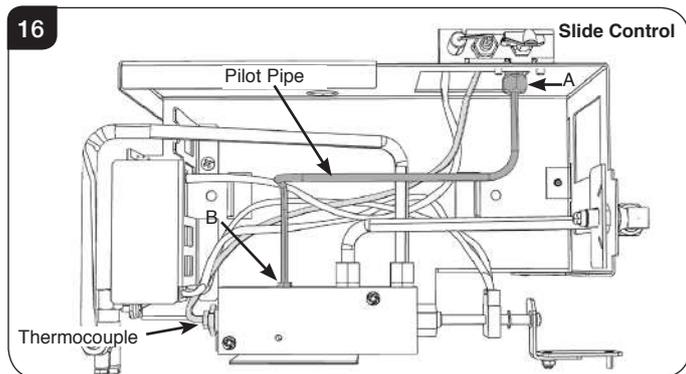

- 8.6 Replace with a new pilot assembly and check the spark gap, see Diagram 18.

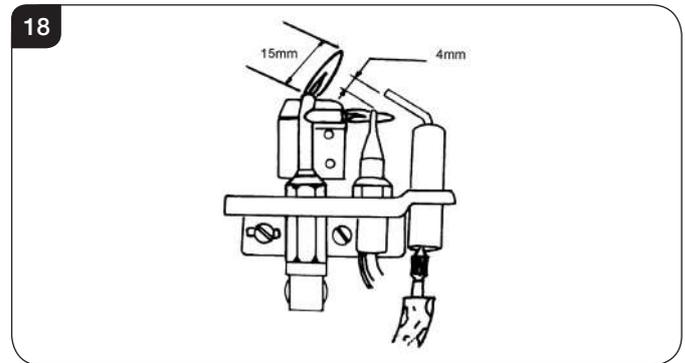


- 8.7 After reassembly check for gas soundness and carry out a flame failure functional check as detailed in the Fault Finding chart, especially the time it takes for the mag unit to close.

9. Gas Valve

Remote Control

- 9.1 To remove the gas valve first remove the thermocouple, see Diagram 19, Arrow A.

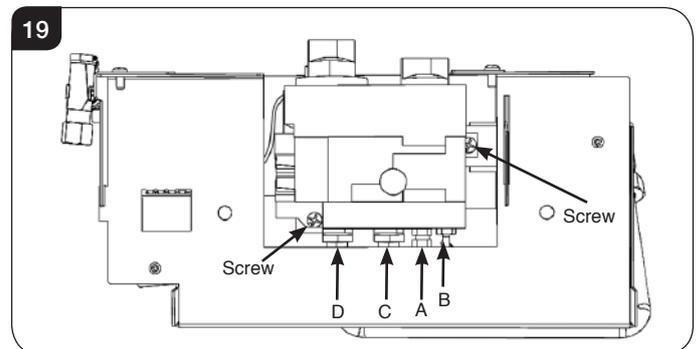


- 9.2 Undo the pilot pipe from the gas valve, see Diagram 19, Arrow B.
- 9.3 Undo the inlet pipe from the gas valve, see Diagram 19, Arrow C.
- 9.4 Undo the main injector feed pipe from the gas valve, see Diagram 19, Arrow D.
- 9.5 Disconnect the ignition lead from the pilot unit.
- 9.6 Undo 2 screws securing the gas valve to the bracket, see Diagram 19.
- 9.7 The gas valve can now be removed from the burner unit.
- 9.8 To replace the gas valve reverse the above procedure.
- 9.9 Check for gas leaks.


Servicing Instructions - Replacing Parts

Slide Control

- 9.10 To remove the gas valve first remove the thermocouple, see Diagram 20, Arrow A.

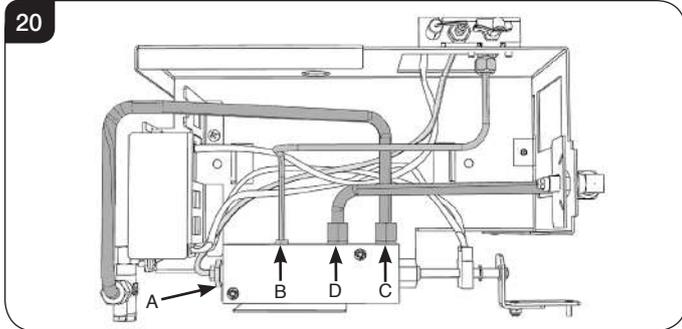


- 9.11 Undo the pilot pipe from the gas valve, see Diagram 20, Arrow B.
- 9.12 Undo the inlet pipe from the gas valve, see Diagram 20, Arrow C.
- 9.13 Undo the main injector feed pipe from the gas valve, see Diagram 20, Arrow D.
- 9.14 Disconnect the 2 leads from the micro-switch, see Diagram 21.

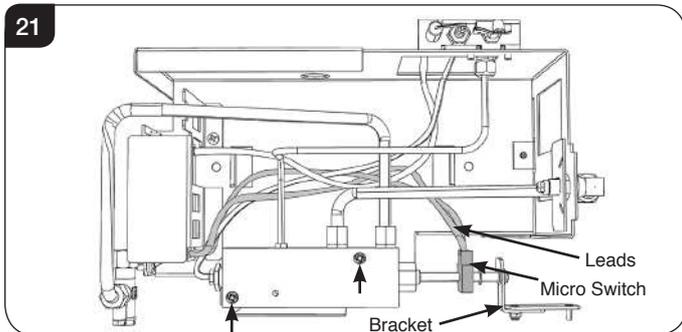

- 9.15 Undo the screw from the end of the spindle and remove the bracket, see Diagram 21. Ensure bracket is replaced during reassembly.
- 9.16 Remove the 2 screws from the gas valve, see Diagram 21.
- 9.17 Replace in reverse order.
- 9.18 Check for gas leaks.

10. Mag Unit (Remote Control only)



- 10.1 Undo the thermocouple nut, see Diagram 22, Arrow B.

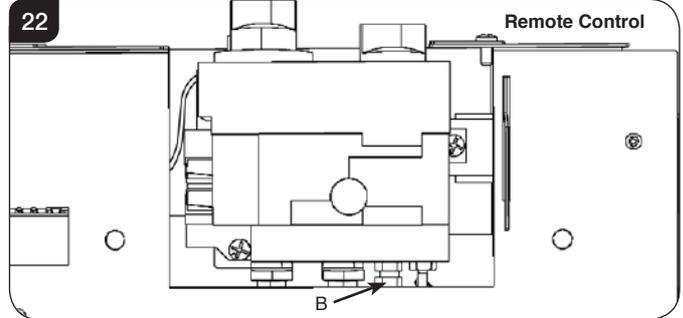

- 10.2 Undo the mag unit retaining nut at the back of the control valve behind the thermocouple nut.
- 10.3 After removing the retaining nut, the mag unit can be tapped out and a replacement fitted:
- 10.4 Replace the mag unit retaining nut and tighten. **Note - this is a gas-tight seal.**
- 10.5 Replace the thermocouple and check for gas leaks.
- 10.6 After reassembly, carry out the flame failure functional check as detailed in the Fault Finding chart, especially the time it takes for the mag unit to close.

11. Micro-Switch (Slide Control Model only)


- 11.1 Disconnect the two leads from the Micro-Switch, see Diagram 21.
- 11.2 Remove the screw, bracket, washer & spacer from the Micro-Switch spindle, see Diagrams 23 & 24.

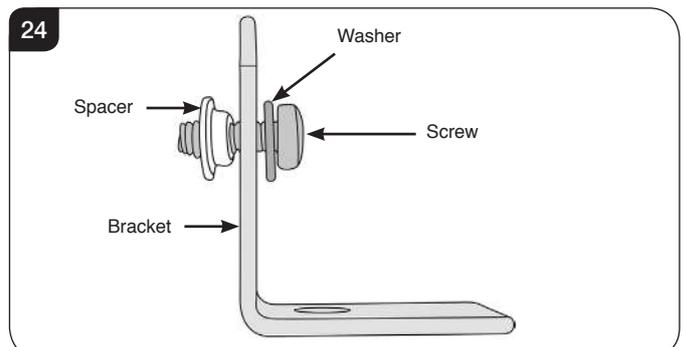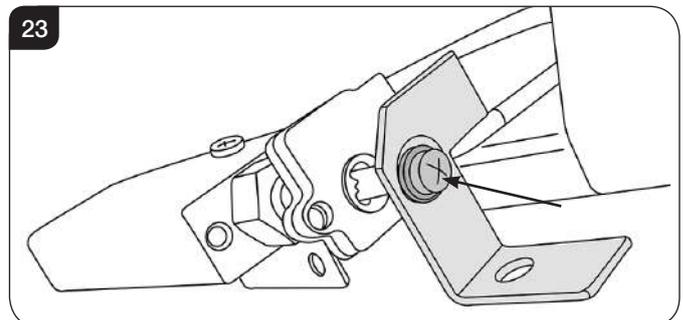

Servicing Instructions - Replacing Parts

When replacing ensure that the components are assembled in the same order.



- 11.3 Remove the circlip from the spindle, see Diagram 25.

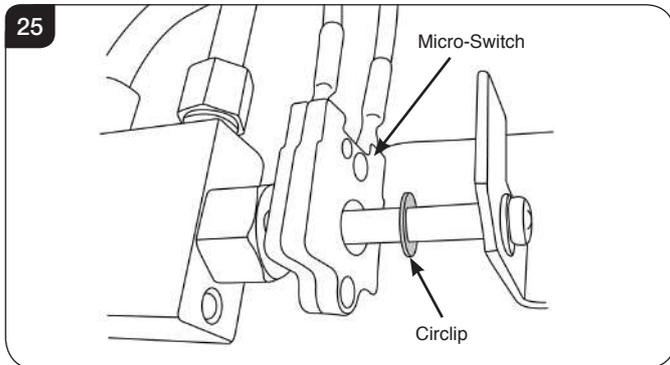

- 11.4 Replace the micro-switch.
Reassemble in reverse order.

12. Main Injector


- 12.1 Undo the compression nut from the feed pipe, see Diagrams 26 & 27, Arrows D.
- 12.2 Undo the lock nut from the injector, see Diagrams 26 & 27, Arrow E.

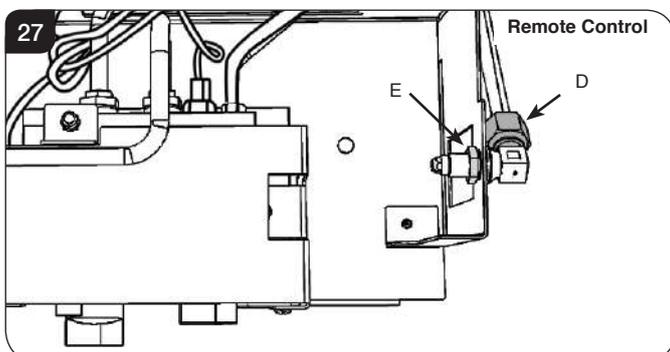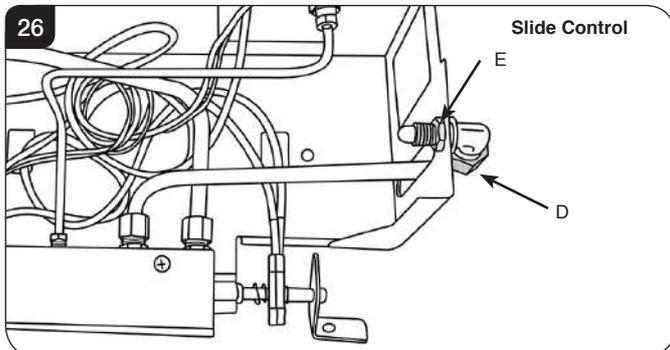


- 12.3 Replace with the correct replacement injector. When ordering, always state the model, gas type and serial number.
- 12.4 Reassemble and turn the gas supply on, check for any leaks.

13. Ignition Unit (Slide Control Model only)

- 13.1 Remove the battery, see Section 3.
- 13.2 Remove the 2 screws to remove the heat shield, see Diagram 28.

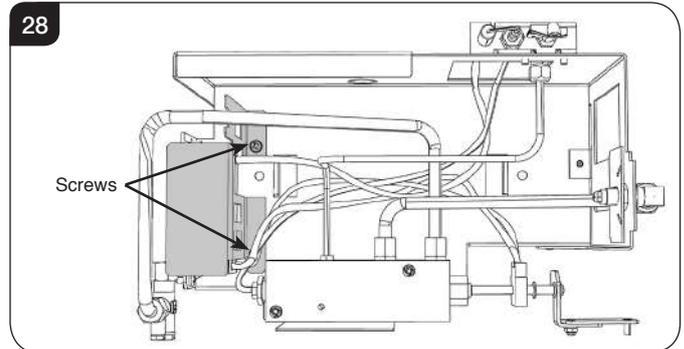

- 13.3 Remove the 2 leads and the pilot ignition lead from the ignition unit, see Diagram 29.

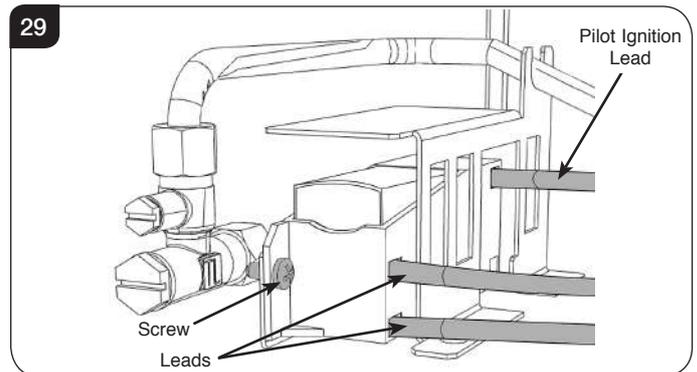


- 13.4 Undo the screw securing the unit in place, see Diagram 29.
- 13.5 Replace in reverse order.

14. Baffle & Liners

The Baffle and Liners do not need to be removed for servicing.

BAFFLE

- 14.1 Undo the 3 screws securing it to the roof of the firebox, see Diagram 30.

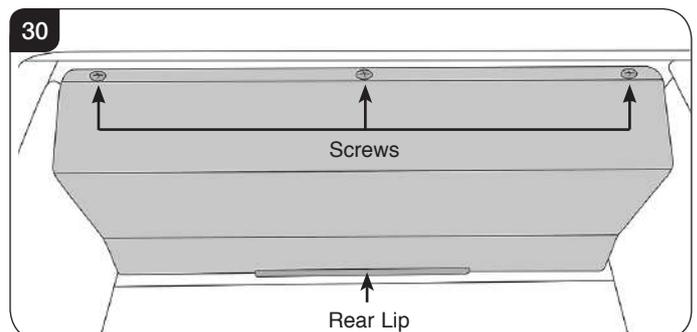

Servicing Instructions - Replacing Parts


14.2 The baffle can now be removed by lowering the front edge and pulling forward through the front of the appliance.
TAKE CARE NOT TO DAMAGE THE SIDE PANELS.

14.3 Note: When replacing the baffle ensure that the rear edge locates above the rear lip, see Diagram 30.

LINERS

Once the baffle has been placed carefully to one side the liners can then be taken out in the following order.


14.4 To remove the Right Hand liner first tilt inwards towards the centre of the firebox before lifting up and pulling out through the front of the firebox, see Diagram 31.

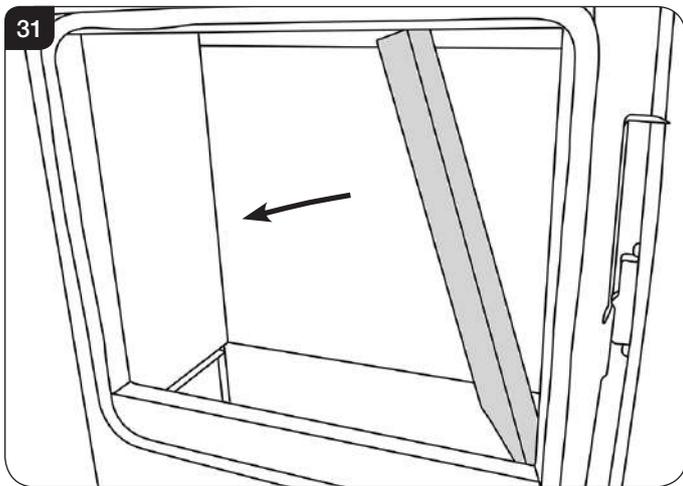

14.5 To remove the Left Hand liner first tilt inwards towards the centre of the firebox before lifting up and pulling out through the front of the firebox, see Diagram 31.

The 2 side liners also support the rear liner. Taking out the side liners will allow the rear liner to drop down so ensure it is supported.

14.6 Remove the rear liner by carefully lifting over the bottom bracket and twisting slightly to allow it to be removed through the front of the appliance, see Diagram 32.

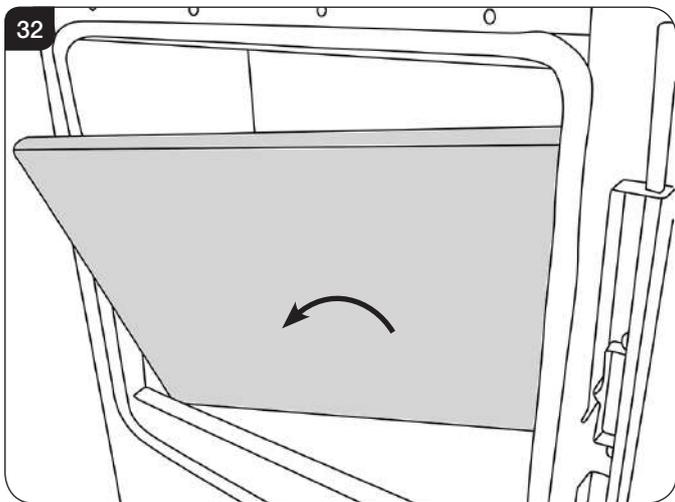

14.7 To replace the liners and baffle reverse these procedures.

15. Changing between Gas Types


In order to change between gas types, it will be necessary to change the **Gas Valve, Pilot, Injector, Burner, & Databadge.**

Note: The control valve will be set for the particular appliance and gas type. In all instances, when ordering new parts, be sure to quote the appliance type and serial number.

Use only genuine Gazco replacement parts. Nonstandard components will invalidate the guarantee and may be dangerous.

16. Debris Collection

- 16.1 Remove the frame from the appliance by referring to the separate instructions supplied with the front.
- 16.2 Remove the glass frame, see Section 2 and the fuel bed components. Place carefully to one side.
- 16.3 Remove the baffle and liners, see Section 14.
- 16.4 Remove the main burner, see Section 4.
- 16.5 Remove the Control Assembly, see Section 5.
- 16.6 Undo the screws and remove the convector air panel, see Diagram 33.

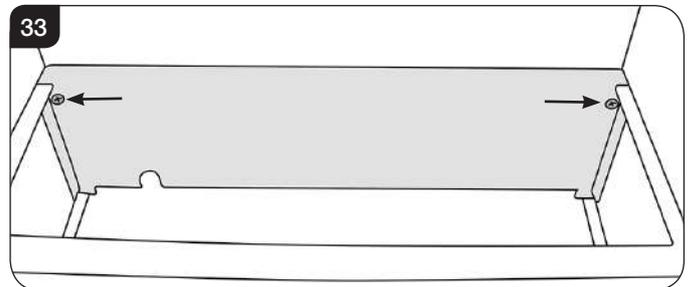


- 16.7 Pull the top of the air panel forwards to release, then tilt the bottom edge upwards into the firebox to remove.
- 16.8 Remove the appliance from the fireplace opening noting the installation method.
- 16.9 Clean out any debris.
- 16.10 Replace the appliance into the opening and securing using the chosen method as described in the installation section.
- 16.11 To replace the convector air panel:

Angle the top edge of the panel up and under the lip at the back of the firebox.

Clip the panel into place and secure with the 2 previously removed screws.

Servicing Instructions - Replacing Parts

17a. Spares List - Remote Control

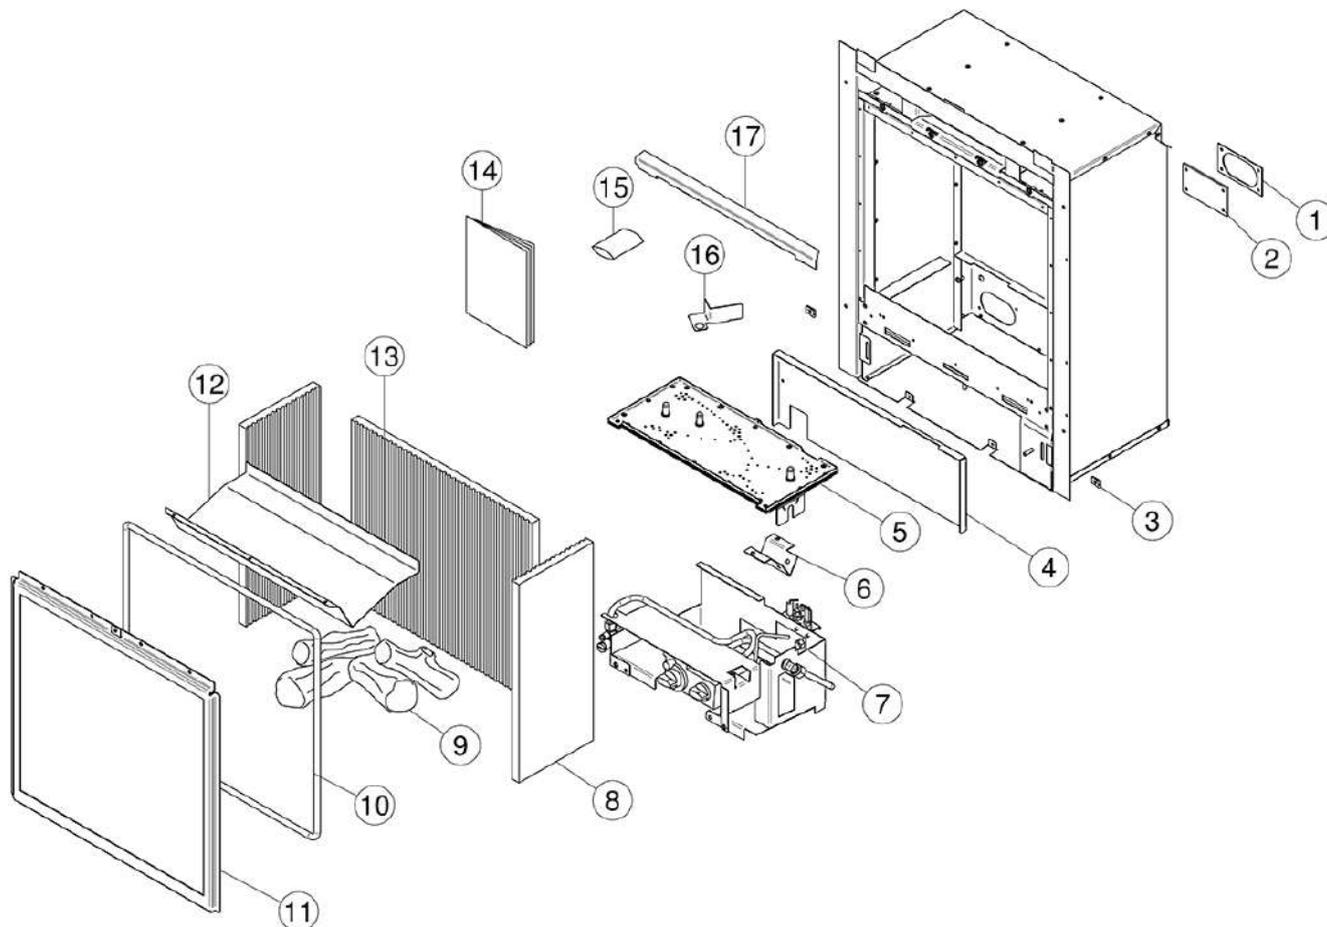

| No. | Component | Part Code | | |
|-----|-----------------------------|-------------|----------|----------|
| | | Natural Gas | LPG | Quantity |
| 1 | Inlet Plate | MEC3746 | | 1 |
| 2 | Inlet Silicone Seal | FA0354 | | 1 |
| 3 | Spire Clip | FA0041 | | 2 |
| 4 | Rear Inner Baffle | GZ14399 | | 1 |
| 5 | Burner Assembly | GZ14537 | GZ14540 | 1 |
| 6 | Aeration Cover 2 x Ø6.5mm | GZ14549 | - | 1 |
| 7 | Engine Assembly | GZ15200N | GZ15200P | 1 |
| 8 | Black Reed LH and RH Lining | CE1856 | | 2 |
| 9 | Log Set | CE1755 | | 1 |
| 10 | Ropeseal | FA0600 | | 1 |
| 11 | Door Assembly | GZ14017 | | 1 |
| 12 | Top Baffle | GZ14401 | | 1 |
| 13 | Black Reed Rear Lining | CE1857 | | 1 |
| 14 | Installation Instructions | PR2443 | | 1 |
| 15 | Embaglow | GZ8471 | | 1 |
| 16 | Burner Tray Divider | GZ14398 | | 1 |
| 17 | Burner Tray Support | GZ14012 | | 1 |




Due to continual technical improvements please check online or with your Gazco retailer for the most up to date parts lists.

Only use Genuine Gazco spares when servicing your appliance.

All of our essential spare parts and consumable items are available to purchase from our webshop at www.gazcospares.com.

Servicing Instructions - Replacing Parts

17a. Spares List - Remote Control - Burner Assembly

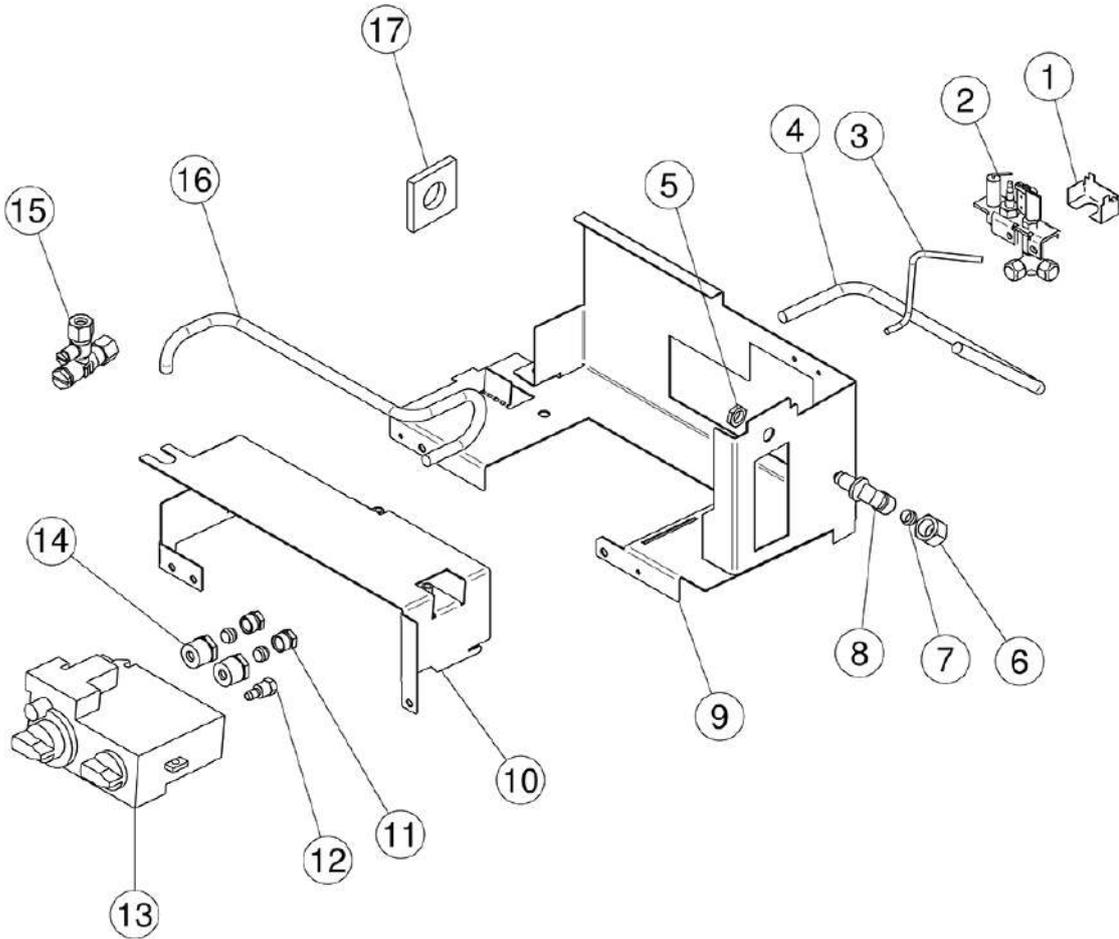

| No. | Component | Part Code | | |
|-----|-----------------------------|--------------------|--------------------|------|
| | | Natural Gas | LPG | Qty. |
| 1 | Lint Arrester Shield | PI0056 | | 1 |
| 2 | Oxypilot | PI0044 | PI0045 | 1 |
| 3 | 4mm Pilot Pipe | GZ15118 | | 1 |
| 4 | 8mm Injector Pipe | GZ15117 | | 1 |
| 5 | 1/8" BSP Locknut | FA0241 | | 1 |
| 6 | 1/4" BSP Nut | FA0029 | | 1 |
| 7 | Olive 8mm | FA0011 | | 2 |
| 8 | Injector | IN0053 Size 170 | IN0031 Size 150 | 1 |
| 9 | Receiver & Valve Bracket | GZ14853 | | 1 |
| 10 | Valve & Heat Shield Bracket | GZ15009 | | 1 |

| No. | Component | Part Code | | |
|-----|--|-------------|-----|------|
| | | Natural Gas | LPG | Qty. |
| 11 | 8mm Internal Tube Nut | FA0295 | | 2 |
| 12 | Shear Nut & Olive 4mm | GC0024 | | 1 |
| 13 | Mertik Maxitrol GV36 | GC0088 | | 1 |
| 14 | 3/8" BSP Brass Adapter | FA0294 | | 2 |
| 15 | Inlet Isolation Device & Pressure Test Point | GC0095 | | 1 |
| 16 | 8mm Inlet Pipe | GZ15116 | | 1 |
| 17 | Rubber Venturi Seal | FA0171 | | 1 |




Due to continual technical improvements please check online or with your Gazco retailer for the most up to date parts lists.

Only use Genuine Gazco spares when servicing your appliance.

All of our essential spare parts and consumable items are available to purchase from our webshop at www.gazcospares.com.

Servicing Instructions - Replacing Parts

17a. Spares List - Remote Control - Control Assembly

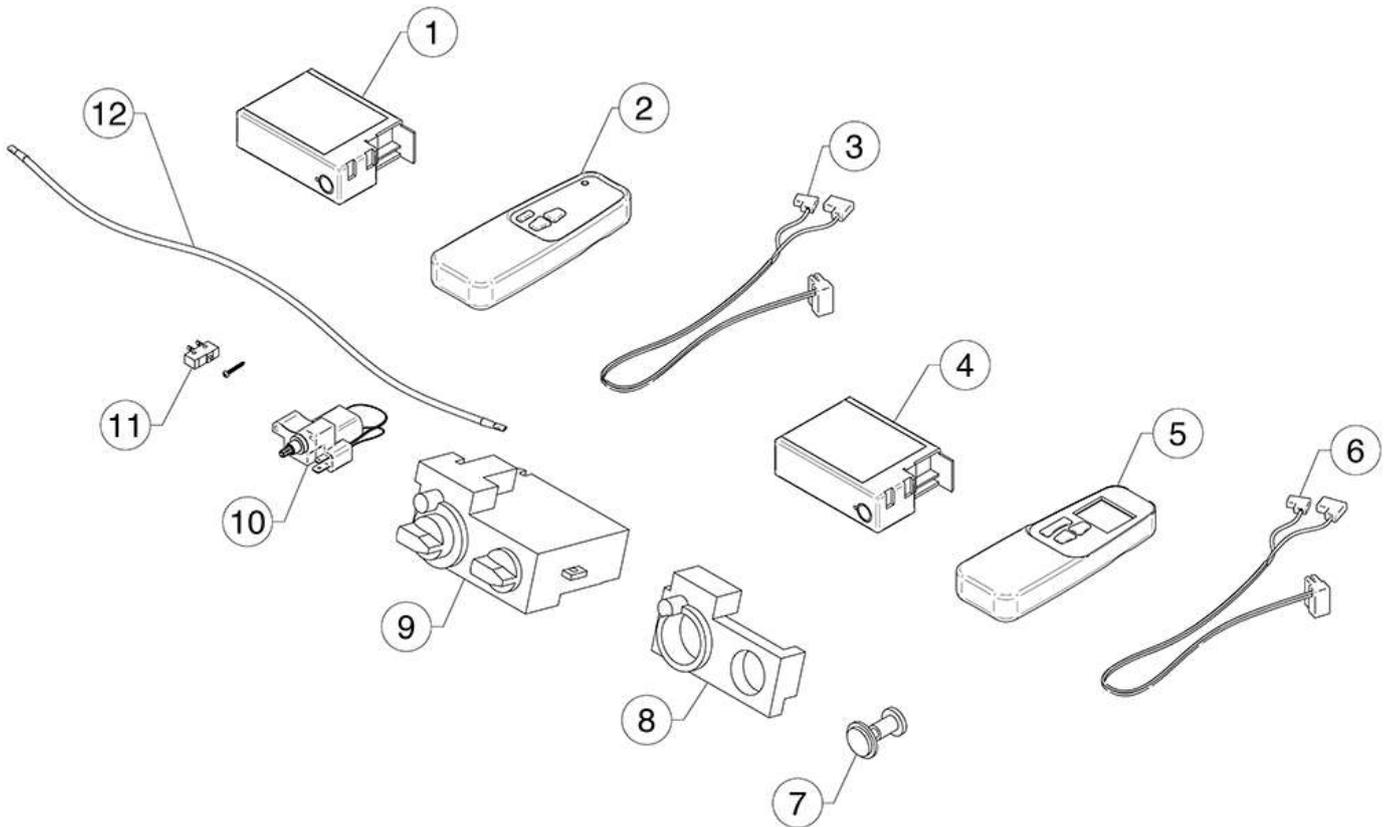

| No. | Component | Part Code | | |
|-----|-----------------------------|-------------|-----|----------|
| | | Natural Gas | LPG | Quantity |
| 1 | Standard Receiver | EL0235 | | 1 |
| 2 | Standard Handset | EL0239 | | 1 |
| 3 | Standard Receiver Cable | EL0237 | | 1 |
| 4 | Thermostatic Receiver | EL0236 | | 1 |
| 5 | Thermostatic Handset | EL0240 | | 1 |
| 6 | Thermostatic Receiver Cable | EL0238 | | 1 |
| 7 | Mag Unit | GC0166 | | 1 |
| 8 | Control Valve Cover | GC0087 | | 1 |
| 9 | Control Valve | GC0088K | | 1 |
| 10 | Geared Motor | EL0234 | | 1 |
| 11 | Micro Switch and Screw | EL0241 | | 1 |
| 12 | Ignition Lead | GC0090 | | 1 |




Due to continual technical improvements please check online or with your Gazco retailer for the most up to date parts lists.

Only use Genuine Gazco spares when servicing your appliance.

All of our essential spare parts and consumable items are available to purchase from our webshop at www.gazcospares.com.

Servicing Instructions - Replacing Parts

17b. Spares List - Slide Control

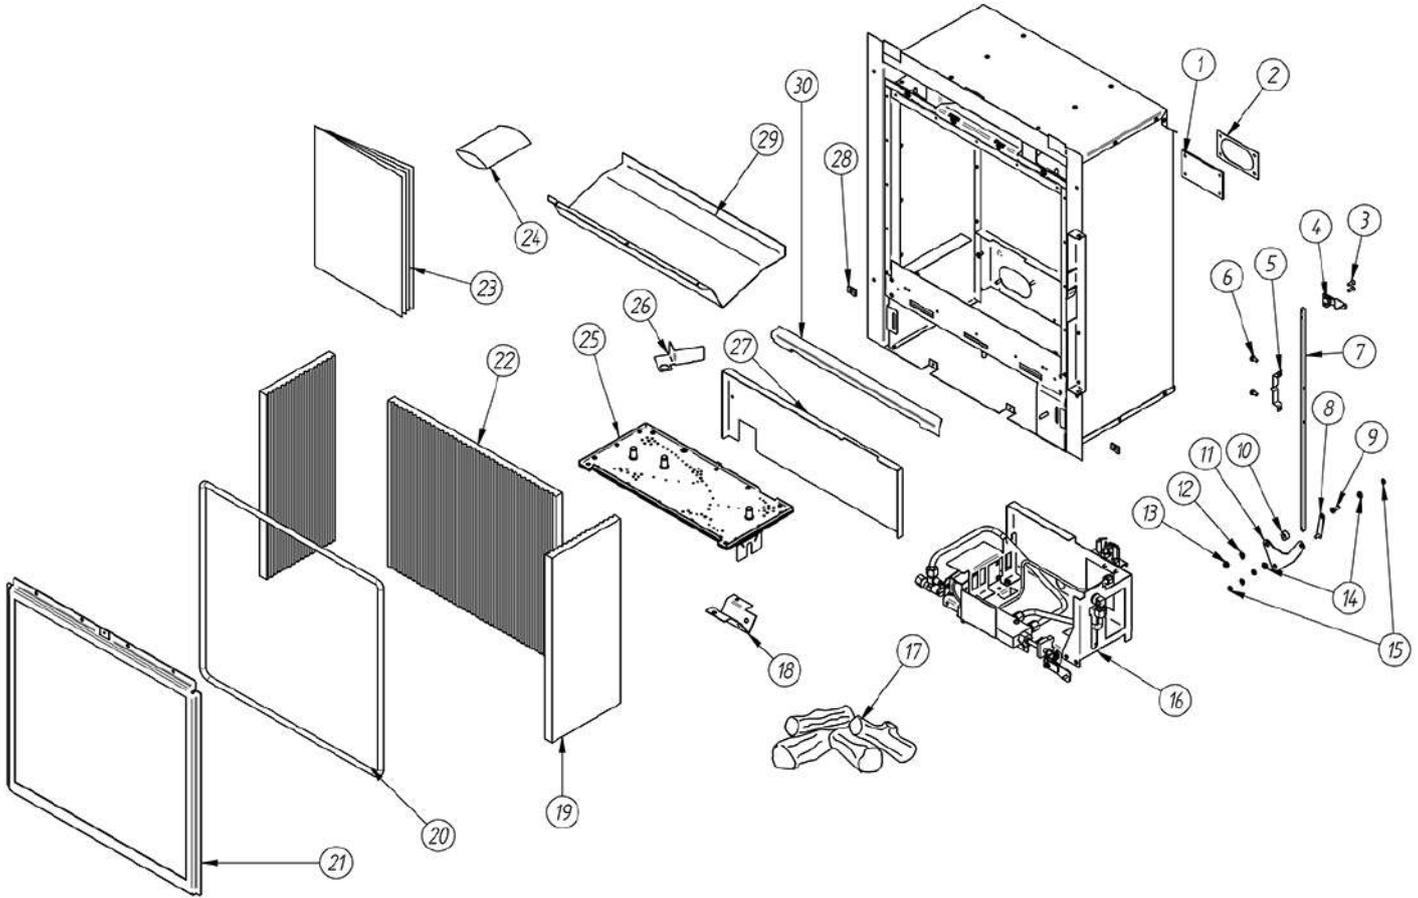

| No. | Component | Part Code | | |
|-----|--------------------------------|-------------|-----|----------|
| | | Natural Gas | LPG | Quantity |
| 1 | Inlet Silicone Seal | FA0354 | | 1 |
| 2 | Inlet Plate | ME3746 | | 1 |
| 3 | M4 x 10 Screw | FA0330 | | 2 |
| 4 | Handle | GZ11002 | | 1 |
| 5 | Spring Clip | GZ11061 | | 1 |
| 6 | M4 x 6 Pozi | FA0694 | | 2 |
| 7 | Pushrod | GZ11009 | | 1 |
| 8 | Link Plate - Small | GZ10052 | | 1 |
| 9 | M4 x 12 Screw | D2150-1412 | | 1 |
| 10 | Metal Spacer | FA0691 | | 1 |
| 11 | Crank Lever | ME11008 | | 1 |
| 12 | Circular Clearance Spacer - M5 | FA0689 | | 1 |
| 13 | M5 Locknut | FA0038 | | 1 |
| 14 | Circular Clearance Spacer - M4 | FA0685 | | 3 |
| 15 | M4 Nyloc Nut | C94323 | | 3 |

| No. | Component | Part Code | | |
|-----|---------------------------|-------------|----------|----------|
| | | Natural Gas | LPG | Quantity |
| 16 | Engine Assembly | GZ14021N | GZ14021P | 1 |
| 17 | Log Set | CE1755 | | 1 |
| 18 | Aeration Cover 2 x Ø6.5mm | GZ14549 | - | 1 |
| 19 | Black Reed LH & RH Lining | CE1856 | | 2 |
| 20 | Ropeseal | FA0600 | | 1 |
| 21 | Door Assembly | GZ14017 | | 1 |
| 22 | Black Reed Rear Lining | CE1857 | | 1 |
| 23 | Installation Instruction | PR2443 | | 1 |
| 24 | Embaglow | GZ8471 | | 1 |
| 25 | Burner Assembly | GZ14537 | GZ14540 | 1 |
| 26 | Burner Tray Divider | GZ14398 | | 1 |
| 27 | Rear Inner Baffle | GZ14399 | | 1 |
| 28 | Spire Clip | FA0041 | | 2 |
| 29 | Top Baffle | GZ14401 | | 1 |
| 30 | Burner Tray Support | GZ14012 | | 1 |




Due to continual technical improvements please check online or with your Gazco retailer for the most up to date parts lists.

Only use Genuine Gazco spares when servicing your appliance.

All of our essential spare parts and consumable items are available to purchase from our webshop at www.gazcospares.com.

Servicing Instructions - Replacing Parts

17b. Spares List - Slide Control - Burner Assembly

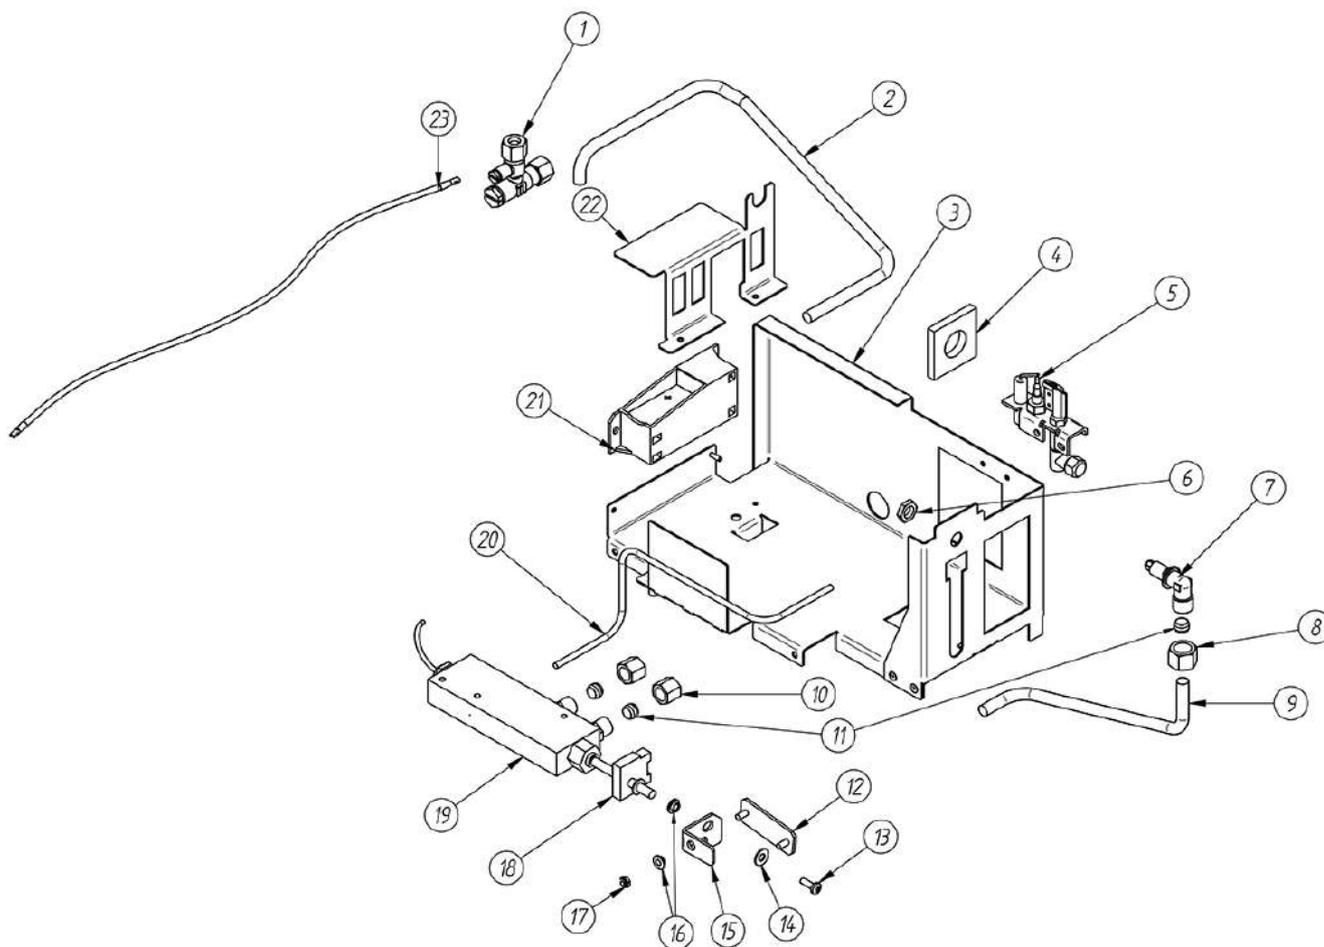

| No. | Component | Part Code | | |
|-----|--|-------------------|-------------------|------|
| | | Natural Gas | LPG | Qty. |
| 1 | Inlet Isolation Device & Pressure Test Point | GC0095 | | 1 |
| 2 | 1/4" BSP Nut | GZ15357 | | 1 |
| 3 | Control Bracket | GZ14020 | | 1 |
| 4 | Venturi Rubber Seal | FA0171 | | 1 |
| 5 | Oxypilot | PI0044 | PI0045 | 1 |
| 6 | Lock Nut | FA0241 | | 1 |
| 7 | Injector | IN0053 - Size 170 | IN0031 - Size 150 | 1 |
| 8 | 1/4" BSP Nut | FA0029 | | 1 |
| 9 | Injector Feed Pipe 8mm | GZ14519 | | 1 |
| 10 | Nut 8mm | FA0122 | | 2 |
| 11 | Olive 8mm | FA0011 | | 3 |

| No. | Component | Part Code | | |
|-----|--------------------------------|-------------|-----|------|
| | | Natural Gas | LPG | Qty. |
| 12 | Bottom Link Assembly - 39mm | GZ11577 | | 1 |
| 13 | M4 x 12 Screw | D2150-1412 | | 1 |
| 14 | M5 Large Washer | FA0705 | | 1 |
| 15 | Valve Actuator Bracket | GZ11007 | | 1 |
| 16 | Circular Clearance Spacer - M4 | FA0685 | | 2 |
| 17 | M4 Nyloc Nut | C94323 | | 1 |
| 18 | Micro Switch Kit | GC0179 | | 1 |
| 19 | Control Valve | GC0168 | | 1 |
| 20 | Pilot Pipe 4mm | GZ14521 | | 1 |
| 21 | Igniter | EL0573 | | 1 |
| 22 | Battery Cover & Elbow Support | GZ14406 | | 1 |
| 23 | Igniter Lead | EL0578 | | 3 |



Due to continual technical improvements please check online or with your Gazco retailer for the most up to date parts lists.

Only use Genuine Gazco spares when servicing your appliance.

All of our essential spare parts and consumable items are available to purchase from our webshop at www.gazcospares.com.

Service Records

1ST SERVICE

Date of Service
Next Service Due
Signed
Retailer's Stamp/GasSafe Registration Number

3RD SERVICE

Date of Service
Next Service Due
Signed
Retailer's Stamp/GasSafe Registration Number

5TH SERVICE

Date of Service
Next Service Due
Signed
Retailer's Stamp/GasSafe Registration Number

7TH SERVICE

Date of Service
Next Service Due
Signed
Retailer's Stamp/GasSafe Registration Number

9TH SERVICE

Date of Service
Next Service Due
Signed
Retailer's Stamp/GasSafe Registration Number

2ND SERVICE

Date of Service
Next Service Due
Signed
Retailer's Stamp/GasSafe Registration Number

4TH SERVICE

Date of Service
Next Service Due
Signed
Retailer's Stamp/GasSafe Registration Number

6TH SERVICE

Date of Service
Next Service Due
Signed
Retailer's Stamp/GasSafe Registration Number

8TH SERVICE

Date of Service
Next Due
Signed
Retailer's Stamp/GasSafe Registration Number

10TH SERVICE

Date of Service
Next Service Due
Signed
Retailer's Stamp/GasSafe Registration Number

Information Requirement - Gas Heaters

Information Requirement for Gaseous Fuel Local Space Heater

| Model | Logic HE CF Remote Control NG | Logic HE CF Remote Control LPG | Logic HE CF Slide Control NG | Logic HE CF Slide Control LPG | |
|---|--|--------------------------------|------------------------------|-------------------------------|-------|
| Fuel | Space Heating Emissions (NOx) - mg / kWh _{input} (GCV) | 130 | 130 | 130 | 130 |
| Heat Output | Nominal Heat Output - P _{nom} | 3.9kW | 3.9kW | 3.9kW | 3.9kW |
| | Minimum Heat Output (indicative) - P _{min} | 1.6kW | 1.6kW | 1.6kW | 1.6kW |
| Auxiliary Electricity Consumption | At Nominal Heat Output - e _{lmax} | N/A | N/A | N/A | N/A |
| | At Minimum Heat Output - e _{lmin} | N/A | N/A | N/A | N/A |
| | In Standby Mode - e _{lsb} | N/A | N/A | N/A | N/A |
| Useful Efficiency (NCV) | Useful Efficiency at nominal heat output - η _{th,nom} | 84.0% | 84.0% | 84.0% | 84.0% |
| | Useful Efficiency at minimum heat output (indicative) - η _{th,min} | 71.0% | 71.0% | 71.0% | 71.0% |
| Permanent Pilot Flame Power requirement | Permanent Pilot Flame Power requirement (if applicable) - P _{pilot} | 0.200kW | 0.200kW | N/A | N/A |
| Type of heat output/room temperature control | | | | | |
| | Two or more manual stages, no room temperature control | No | No | Yes | Yes |
| | Electronic thermostat + day timer | Yes* | Yes* | No | No |
| Other control options (multiple selections possible) | | | | | |
| | Room temperature control, with presence detection | No | No | No | No |
| | Room temperature control, with open window detection | No | No | No | No |
| | With distance control option | No | No | No | No |
| | With adaptive start control | No | No | No | No |
| | With working time limitation | No | No | No | No |
| | With black bulb sensor | No | No | No | No |
| Energy Efficiency Index | | 77.5% | 77.5% | 75.0% | 75.0% |
| Energy Efficiency Class | | C* | C* | D | D |

Contact: Gazco Ltd, Osprey Road, Sowton Industrial Estate, Exeter, EX2 7JG

* Achievable using Thermostatic and Timer Remote Control upgrade kit, part number 8456.

Gazco Limited, Osprey Road, Sowton Industrial Estate, Exeter, Devon, England EX2 7JG
Technical Customer Services: (01392) 261950 Fax: (01392) 261951
E-mail: technicalservices@gazco.com

A member of the Stovax Group
E & O E